MODE 3 2 PHONE BUTTONS

Answer an incoming call Press ANSWER button guickly Refuse an incoming call Press CLOSE button quickly End a call Press CLOSE button guickly Start a vocal call Press ANSWER button quickly Redial the last number Press ANSWER button for a long time Enter discrete mode Press ANSWER button guickly Exit from discrete mode Press ANSWER button guickly Increase the volume Press the VOL+ quickly Lower the volume Press the VOL — quickly

To enter the menu DIRECTLY FROM THE ORIGINAL JOYSTICK

To reset the kit DIRECTLY FROM THE ORIGINAL JOYSTICK

INSTALLATION MANUAL

MULTICOMM 3100

UNIVERSAL Adapter for RESISTIVE steering wheel commands & PARROT CK3100 Handsfree Kit rev. 2


DESCRIPTION

MULTICOMM is a **UNIVERSAL** adapter for steering wheel comands with a **resistive voltage** protocol. The module allows you to control the PARROT 3100 Handsfree Kit with the steering wheel commands in all its functions.

The selection of the protocol comes through a **SELF-LEARNING** procedure, which means that on the termination of the connections with a few and simple operations you can pair the H/F kit to the steering wheel commands.

CONNECTIONS

- Connect the power cable of Multicomm to the 14-way connector of the Multicomm.
- Join the connector of the kit's control keypad or the TERMINATION plug (6) to the connector of the interface's power cable
- Connect the Multicomm ISO power cable to the ISO power cable of the Parrot control unit.
- Connect the YELLOW MUTE wire of Multicomm to the Parrot's YELLOW MUTE wire and to the car stereo MUTE input if available.
- Refer to the chapter entitled CONNECTIONS to connect the V1 and V2 wires.

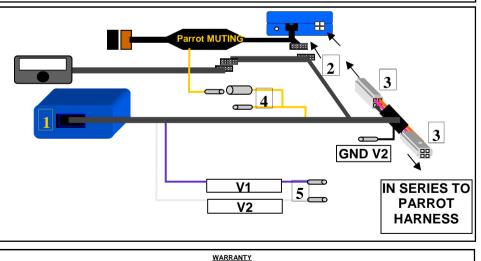

WARKANTT THIS PRODUCT IS GUARANTEED FOR TWO YEARS AGAINST ANY MANUFACTURING DEFECT. PURCHASE INVOICE IS REQUIRED AS A VALIDITY OF THE GUARANTEE

The information in this guide are purely for information purposes, therefore, are subject to change without notice. At the time of publication the information is correct and reliable. However Paser can not be held responsible for any consequences resulting from errors or omissions in this manual. Paser reserves the right to improve / change the product or manual without obligation to notify users.

SELF-LEARNING AND FUNCTIONS

Once MULTICOMM is installed, it is necessary to PROGRAM the unit to the car's protocol. MULTICOMM can manage the H/F functions directly with the SWC button.

PROGRAMMING PROCEDURE

MODE 1

VOLUME BUTTONS (NO PHONE BUTTONS AVAILABLE)

 Insert the ignition and verify that MULTICOMM LED will blink once.
Press the sequence of buttons exactly in this order: VOLUME DOWN VOLUME UP SEEK DOWN SEEK UP

Each press will be confirmed by a blink of the MULTICOMM LED, after the SEEK UP, the LED will be ON with a fixed light.

- 3. Switch OFF the ignition and wait till the LED of the unit switches OFF
- 4. Now switch ON the ignition , the LED must light up.
 - The programming procedure is finished.

MODE 2

ONE PHONE BUTTON AVAILABLE

 Insert the ignition and verify that MULTICOMM LED will blink once.
Press the sequence of buttons exactly in this order: VOLUME DOWN VOLUME UP SEEK DOWN

Each press will be confirmed by a blink of the MULTICOMM LED.

- 3. Now PRESS and KEEP SEEK UP PRESSED till the LED switches OFF.
- 4. Now PRESS quickly PHONE button, the LED will be ON with a fixed light.
- 5. Switch OFF the ignition and wait till the LED of the unit switches OFF
- 6. Now switch ON the ignition , the LED must light up.
 - The programming procedure is finished.

MODE 4 TWO PHONE BUTTON AVAILABLE

- 1. Insert the ignition and verify that MULTICOMM LED will blink once.
- 2. Press the sequence of buttons exactly in this order:
 - VOLUME DOWN

VOLUME UP

SEEK DOWN

Each press will be confirmed by a blink of the MULTICOMM LED.

- 3. Now PRESS and KEEP SEEK UP PRESSED till the LED switches OFF.
- 4. Now PRESS and KEEP PHONE ANSWER button PRESSED till the LED switches OFF.
- 5. Now PRESS quickly PHONE CLOSE button, the LED will be ON with a fixed light.
- 6. Switch OFF the ignition and wait till the LED of the unit switches OFF.
- 7. Now switch ON the ignition , the LED must light up.

The programming procedure is finished.

MODE 2 ONE PHONE BUTTON

Answer an incoming call Press TEL button quickly Refuse an incoming call Press TEL button for a long time End a call Press TEL button for a long time Start a vocal call Press TEL button quickly Redial the last number Press TEL button for a long time Enter discrete mode Press TEL button guickly Exit from discrete mode Press TEL button auickly Increase the volume Press the VOL+ quickly Lower the volume Press the VOL — quickly

To enter the menu DIRECTLY FROM THE ORIGINAL JOYSTICK

To reset the kit DIRECTLY FROM THE ORIGINAL JOYSTICK

MODE 1 AUDIO BUTTONS (NO PHONE BUTTONS AVAILABLE)


Answer an incoming call Press VOL+ quickly Refuse an incoming call Press VOL — quickly End a call Press VOL — quickly Start a vocal call Press VOL+ quickly, followed by VOL- quickly Redial the last number Press VOL+ quickly, followed by VOL- for a long time Enter discrete mode Press VOL+ quickly Exit discrete mode Press VOL+ quickly, followed by VOL- quickly Increase the volume Press the sequence VOL+ quickly, followed by VOL- quickly many times till the required volume is reached Lower the volume (1 step)


Press the sequence VOL — quickly, followed by VOL + quickly many times till the required volume is reached

To enter the menu DIRECTLY FROM THE ORIGINAL JOYSTICK


To reset the kit DIRECTLY FROM THE ORIGINAL JOYSTICK


CONNECTIONS

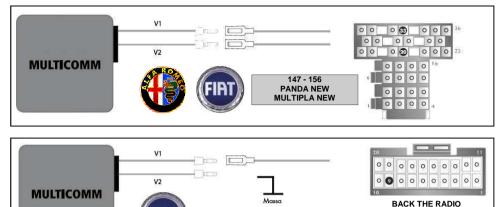


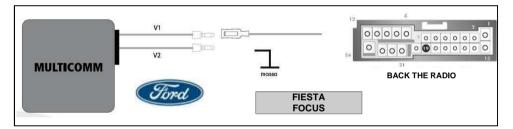

16

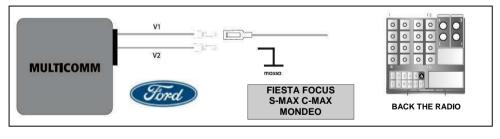

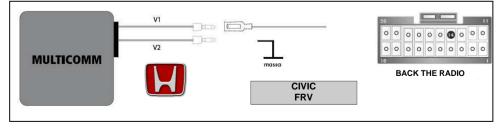

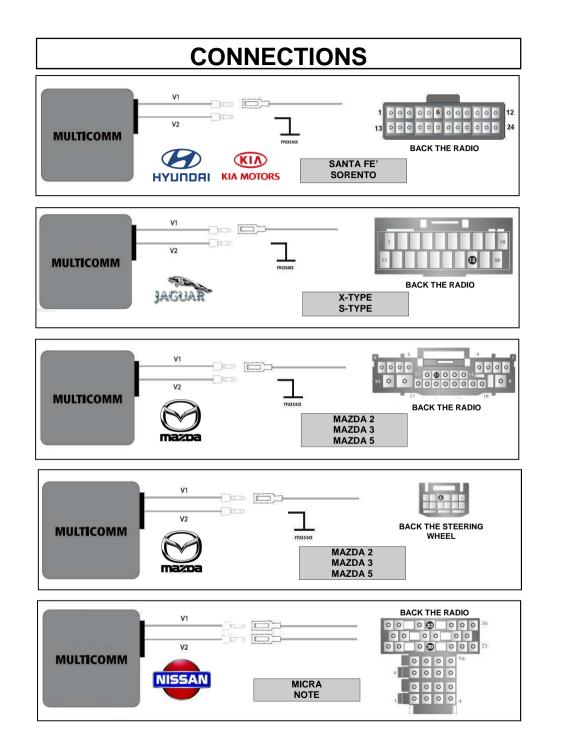

CONNECTIONS

