

MODE 3 2 PHONE BUTTONS

Answer an incoming call

Press ANSWER button quickly

Refuse an incoming call

Press CLOSE button quickly

End a call

Press CLOSE button quickly

Start a vocal call

Press ANSWER button quickly

Redial the last number

Press ANSWER button for a long time

Enter discrete mode

Press ANSWER button quickly

Exit from discrete mode

Press ANSWER button quickly

Increase the volume

Press the VOL+ quickly

Lower the volume

Press the VOL — quickly

To enter the menu

Press twice the sequence SEEK+ quickly, followed by SEEK— quickly
(SEEK+ / SEEK — / SEEK+ / SEEK —)

Go forward to the menu

Press SEEK+ within 10 seconds or

Press the VOL+

Go backwards to the menu

Press SEEK— within 10 seconds or

Press the VOL—

To confirm a menu selection

Press ANSWER button quickly

To delete a menu selection

Press CLOSE button quickly

To reset the kit

Press the sequence VOL—quickly, followed by VOL+ quickly five times
(VOL- / VOL + / VOL- / VOL + /VOL- / VOL + /VOL- / VOL + /VOL- / VOL +)

INSTALLATION MANUAL

MULTICOMM EVOLUTION

UNIVERSAL Adapter
for RESISTIVE steering wheel commands
& PARROT EVOLUTION Handsfree Kit rev. 3


DESCRIPTION

MULTICOMM is a **UNIVERSAL** adapter for steering wheel comands with a **resistive voltage** protocol. The module allows you to control the PARROT EVOLUTION Handsfree Kit with the steering wheel commands in all its functions.

The selection of the protocol comes through a **SELF-LEARNING** procedure, which means that on the termination of the connections with a few and simple operations you can pair the H/F kit to the steering wheel commands.

CONNECTIONS

- Connect the power cable of Multicomm to the 14-way connector of the Multicomm.
- Join the connector of the kit's control keypad or the TERMINATION plug (6) to the connector of the interface's power cable
- Connect the Multicomm ISO power cable to the ISO power cable of the Parrot control unit .
- Connect the YELLOW MUTE wire of Multicomm to the Parrot's YELLOW MUTE wire and to the car stereo MUTE input if available.
- Refer to the chapter entitled CONNECTIONS to connect the V1 and V2 wires.

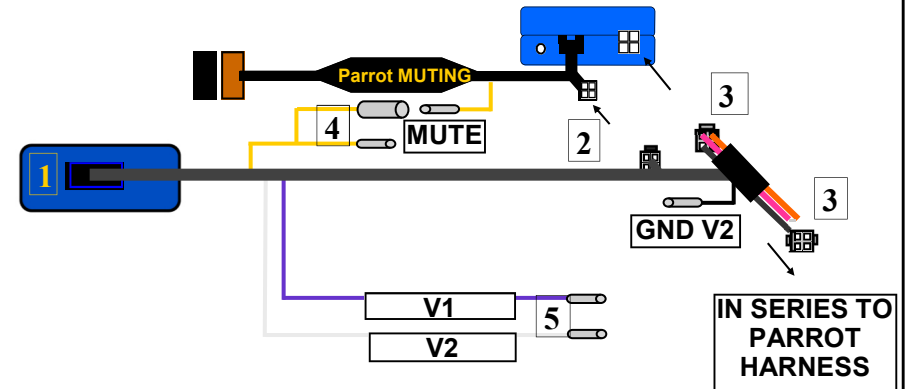

WARRANTY

THIS PRODUCT IS GUARANTEED FOR TWO YEARS AGAINST ANY MANUFACTURING DEFECT.
PURCHASE INVOICE IS REQUIRED AS A VALIDITY OF THE GUARANTEE

SELF-LEARNING AND FUNCTIONS

Once MULTICOMM is installed, it is necessary to PROGRAM the unit to the car's protocol. MULTICOMM can manage the H/F functions directly with the SWC button.

PROGRAMMING PROCEDURE

MODE 1

VOLUME BUTTONS (NO PHONE BUTTONS AVAILABLE)

1. Insert the ignition and verify that MULTICOMM LED will blink once.
2. Press the sequence of buttons exactly in this order:
VOLUME DOWN
VOLUME UP
SEEK DOWN
SEEK UP

Each press will be confirmed by a blink of the MULTICOMM LED, after the SEEK UP, the LED will be ON with a fixed light.

3. Switch OFF the ignition and wait till the LED of the unit switches OFF
4. Now switch ON the ignition, the LED must light up.
The programming procedure is finished.

MODE 2

ONE PHONE BUTTON AVAILABLE

1. Insert the ignition and verify that MULTICOMM LED will blink once.
2. Press the sequence of buttons exactly in this order:
VOLUME DOWN
VOLUME UP
SEEK DOWN

Each press will be confirmed by a blink of the MULTICOMM LED.

3. Now PRESS and KEEP SEEK UP PRESSED till the LED switches OFF.
4. Now PRESS quickly PHONE button, the LED will be ON with a fixed light.
5. Switch OFF the ignition and wait till the LED of the unit switches OFF
6. Now switch ON the ignition, the LED must light up.
The programming procedure is finished.

MODE 4

TWO PHONE BUTTON AVAILABLE

1. Insert the ignition and verify that MULTICOMM LED will blink once.
2. Press the sequence of buttons exactly in this order:
VOLUME DOWN
VOLUME UP
SEEK DOWN

Each press will be confirmed by a blink of the MULTICOMM LED.

3. Now PRESS and KEEP SEEK UP PRESSED till the LED switches OFF.
4. Now PRESS and KEEP PHONE ANSWER button PRESSED till the LED switches OFF.
5. Now PRESS quickly PHONE CLOSE button, the LED will be ON with a fixed light.
6. Switch OFF the ignition and wait till the LED of the unit switches OFF.
7. Now switch ON the ignition, the LED must light up.
The programming procedure is finished.

MODE 2 ONE PHONE BUTTON

Answer an incoming call

Press TEL button quickly

Refuse an incoming call

Press TEL button for a long time

End a call

Press TEL button for a long time

Start a vocal call

Press TEL button quickly

Redial the last number

Press TEL button for a long time

Enter discrete mode

Press TEL button quickly

Exit from discrete mode

Press TEL button quickly

Increase the volume

Press the VOL+ quickly

Lower the volume

Press the VOL — quickly

To enter the menu

Press twice the sequence SEEK+ quickly, followed by SEEK— quickly
(SEEK+ / SEEK — / SEEK+ / SEEK —)

Go forward to the menu

Press SEEK+ within 10 seconds or

Press the VOL+

Go backwards to the menu

Press SEEK— within 10 seconds or

Press the VOL—

To confirm a menu selection

Press TEL button quickly

To delete a menu selection

Press TEL button for a long time

To reset the kit

Press the sequence VOL—quickly, followed by VOL+ quickly five times
(VOL- / VOL + / VOL- / VOL + /VOL- / VOL + /VOL- / VOL + /VOL- / VOL +)

MODE 1 AUDIO BUTTONS (NO PHONE BUTTONS AVAILABLE)

Answer an incoming call

Press VOL+ quickly

Refuse an incoming call

Press VOL — quickly

End a call

Press VOL — quickly

Start a vocal call

Press VOL+ quickly, followed by VOL— quickly

Redial the last number

Press VOL+ quickly, followed by VOL— for a long time

Enter discrete mode

Press VOL+ quickly

Exit discrete mode

Press VOL+ quickly, followed by VOL— quickly

Increase the volume

Press the sequence VOL+ quickly, followed by VOL— quickly many times till the required volume is reached

Lower the volume (1 step)

Press the sequence VOL — quickly, followed by VOL + quickly many times till the required volume is reached

To enter the menu

Press twice the sequence SEEK+ quickly, followed by SEEK— quickly (SEEK+ / SEEK — / SEEK+ / SEEK —)

Go forward to the menu

Press SEEK+ within 10 seconds or

Press the sequence VOL+ quickly, followed by VOL— quickly

Go backwards to the menu

Press SEEK— within 10 seconds or

Press the sequence VOL— quickly, followed by VOL+ quickly

To confirm a menu selection

Press VOL+ quickly






To delete a menu selection

Press VOL — quickly






To reset the kit

Press the sequence VOL— quickly, followed by VOL+ quickly five times (VOL- / VOL + / VOL- / VOL + / VOL- / VOL + / VOL- / VOL + / VOL- / VOL +)





CONNECTIONS

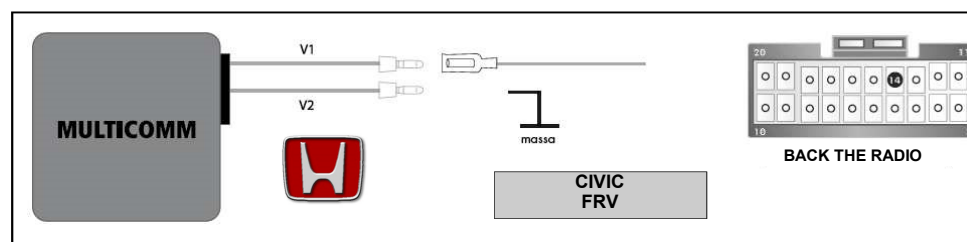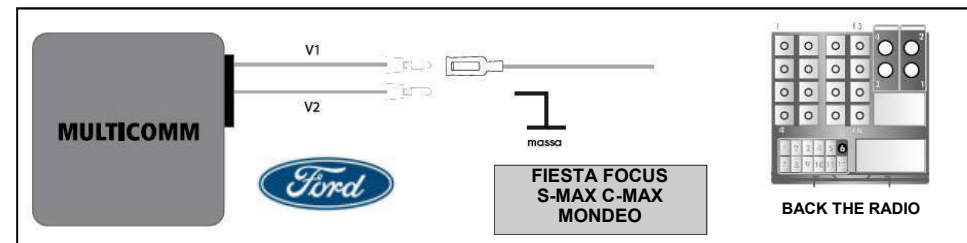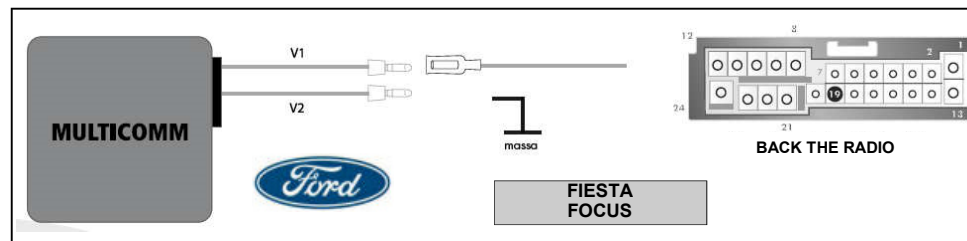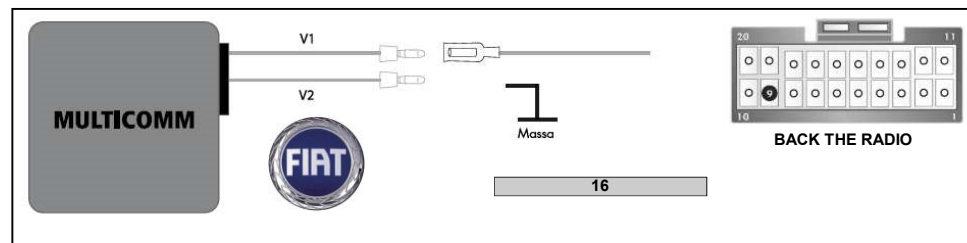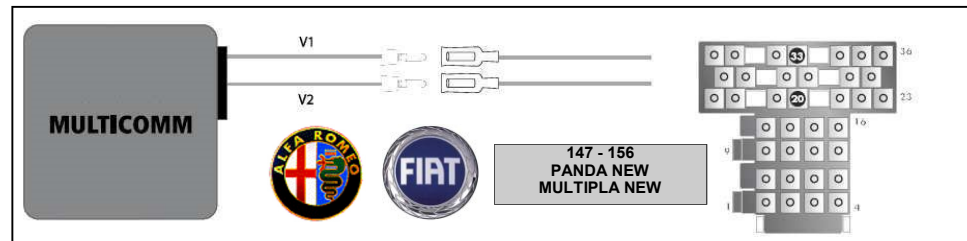

CONNECTIONS

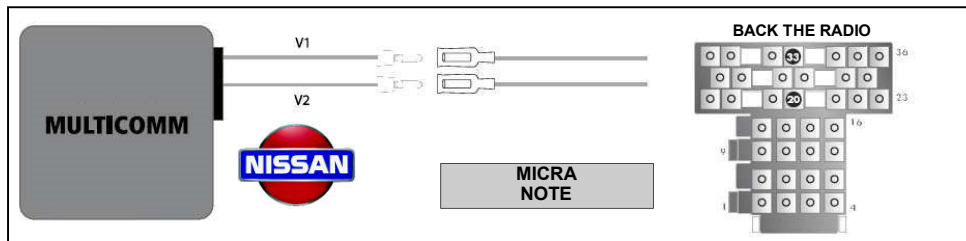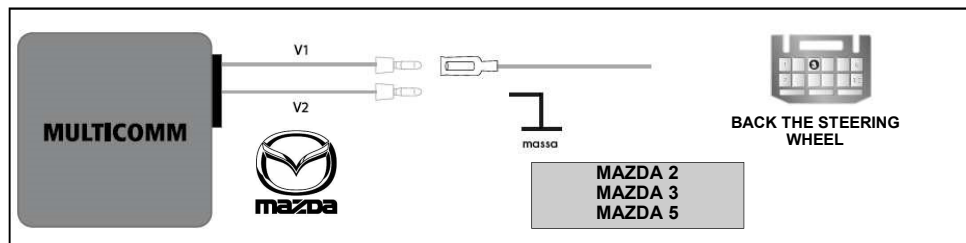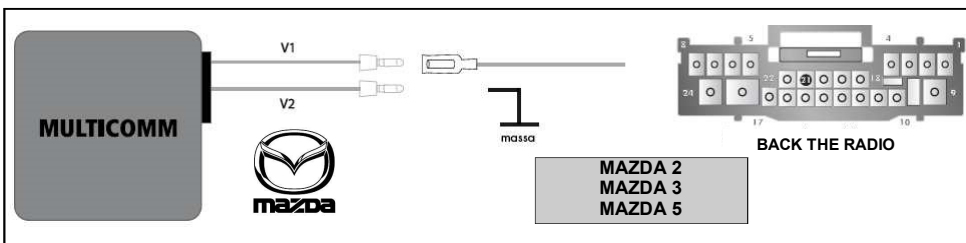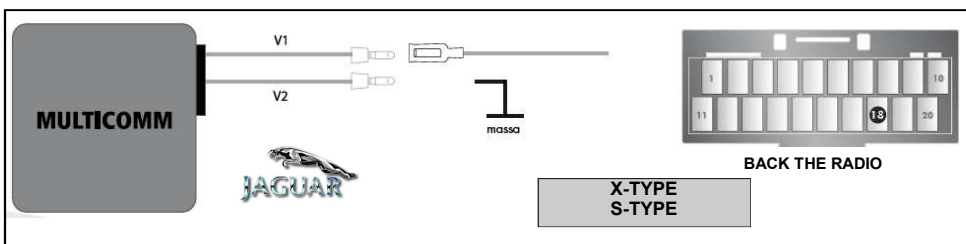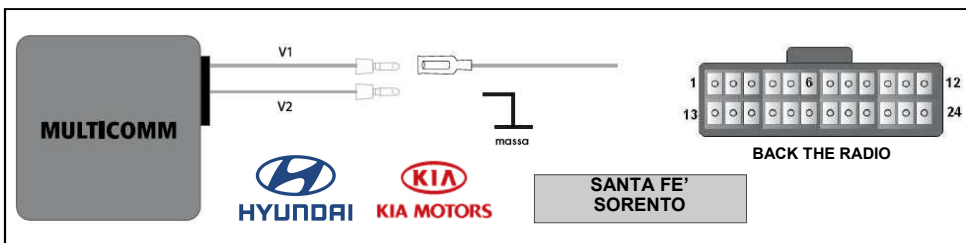

CONNECTIONS

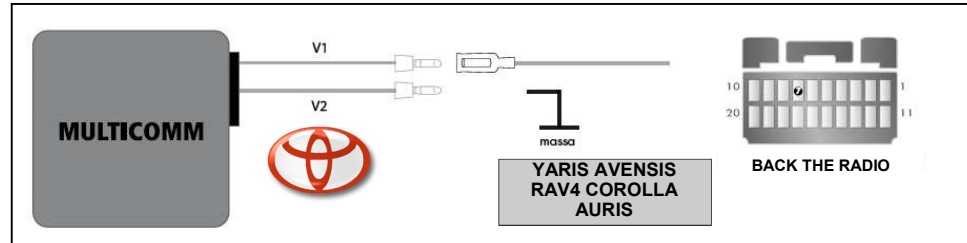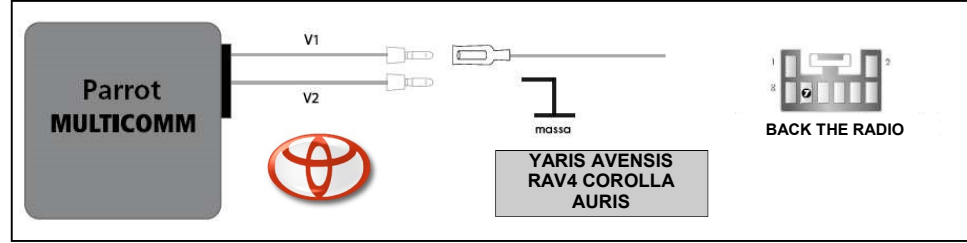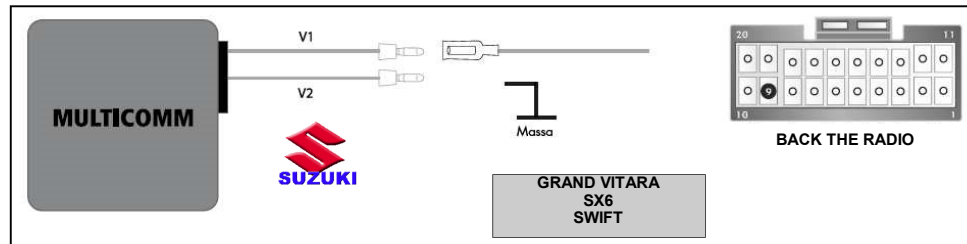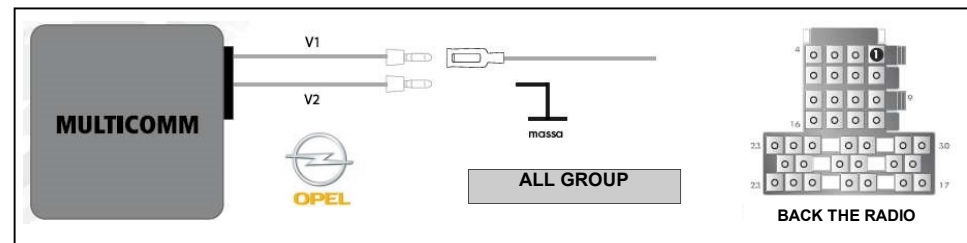

ATTENTION:
WHEN V2 IS NOT USED CONENCT IT TO THE GND!