
		UNICAN PLUS			TABELLE RADIO RADIO TABLES		07.1217 REV 2.17 da/from FWP007UNUN209_85_2C		
FUNC.	CLARION	KENWOOD	JVC	ALPINE	PIONEER	PIONEER	SONY PHONOCAR VM040/VM041 Alpine IVE-W560BT IVE-W560BT-R		NON USATO NOT USED
	FILO E IR	FILO E IR	FILO E IR	FILO E IR	IR	FILO	FILO		
FLASH	1	2	3	4	5	6	7		8
1	VOLUME +								
2	VOLUME —								
3	MEM +	SEEK +							
4	MEM -	SEEK —							
5	BAND	FM	BAND +	MEM +	MEM +	MEM +	MEM +		
6	Input_sel	AM	BAND —	MEM -	MEM -	MEM -	MEM -		
7	SRC	SRC	SRC	SRC	SRC	SRC	SRC		
8	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE		
9	X	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER	X	PHONE ANSWER	PHONE ANSWER		
10	X	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	X	PHONE CLOSE	PHONE CLOSE		
11	X	VOICE RECALL	X	X	X	X	X		

FUNC.	QUANTUM	NON USATO NOT USED	PANASONIC 1	NON USATO NOT USED	PHONOCAR VM040 IR ZENEC ZE-MC194	NON USATO NOT USED	BLAUPUNKT	SONY	NON USATO NOT USED	ECLIPSE AVN2227P AVN4429 AVN726EE SOLO SU RICHIESTA/ ONLY ON REQUEST
	FILO E IR		FILO E IR		FILO E IR		FILO E IR	IR		FILO
FLASH	9	10	11	12 / 13	14	15	16	17	18 / 19 / 20 21 / 22	23
1	X	VOLUME +								
2	X	VOLUME —								
3	P +	SEEK +								
4	P —	SEEK —								
5	X		X		UP		MEM+	MEM +		X
6	X		X		DOWN		BAND	MEM -		X
7	X		SRC		SRC		SRC	SRC		SRC
8	X		MUTE		MUTE		MUTE	MUTE		X
9	X		X		X		X	X		X
10	X		X		X		X	X		X

FUNC.	NON USATO NOT USED	ECLIPSE AVN8826 CD8445E CD4525E AVN726EE	PHONOCAR 1 FORYOU CMU128-CM123 VM020-VM021 VM024	PHONOCAR 2 DM736 VM016 MACROM M-DVD4650R	PHONOCAR 3 (1)VM029-VM030 VM031 -VM032 VM036	NON USATO NOT USED	MACROM	NON USATO NOT USED	PHONOCAR 11 VM057
		IR	FILO E IR	FILO E IR	IR		IR		FILO
FLASH	24 / 25	26	27	28	29	30/ 31 / 32	33	34	35
1	VOLUME +								
2	VOLUME —								
3	SEEK +								
4	SEEK —								
5		MEM +	PLAY	PLAY	PLAY		UP		UP
6		MEM -	BAND	BAND	BAND		DOWN		DOWN
7		SRC	SRC	SRC	SRC		MODE		SOURCE
8		MUTE	MUTE	MUTE	MUTE		MUTE		MUTE
9		X	X	X	PHONE ANSWER		X		PHONE ANSWER
10		X	X	X	PHONE CLOSE		X		PHONE CLOSE

		UNICAN PLUS			TABELLE RADIO RADIO TABLES		07.1217 REV 2.17 da/from FWP007UNUN209_85_2C	
FUNC.	NON USATO NOT USED	ZENEC 1 ZE-MC192 ZE-NC2040 XZENT XT8020	ZENEC 2 ZE-MC192 (SMART-DIAL- REMOTE CON- TROL)	HARDSTONE 1 HS DPM62 HS DPM63	HARDSTONE 2 HS DPM30	HARDSTONE 3 HS DPM31 HS DPM61 FILO E IR PHONOCAR VM017 VM018 FILO E IR VM035	HARDSTONE 4 HS DPM36 HS DPM70	HARDSTONE 5 HS CD1970
		FILO E IR	FILO E IR	FILO E IR	IR	IR	IR	IR
FLASH	36/37/38/39/40	41	42	43	44	45	46	47
1	VOLUME +							
2	VOLUME —							
3	SEEK +		UP	SEEK +				
4	SEEK —		DOWN	SEEK —				
5		OK	UP	>>	BAND	BAND	BAND	BAND
6		DOWN	DOWN	<<	EQ	EQ	EQ	EQ
7		SOURCE	OK/MENU	SOURCE	SOURCE	SOURCE	SOURCE	SOURCE
8		MUTE	STORE	MUTE	MUTE	MUTE	MUTE	MUTE
9		PHONE (OK)	X	X	X	PHONE ANSWER	X	X
10		X	X	X	X	PHONE CLOSE	X	X


FUNC.	NON USATO NOT USED	KENWOOD DT	CLARION BS RCB-165	ALPINE 2 RUE-4912 DVD	ALPINE 3 RUE4912 NAVI	NON USATO NOT USED	ECLIPSE 3 RMC101	HARDSTONE 6 HS DPM7G	NON USATO NOT USED
FLASH		FILO E IR	IR	IR	IR		IR	IR	
	48 / 49	50	51	52	53	54	55	56	57
1		X	VOLUME +	VOLUME +					
2		X	VOLUME —	VOLUME —					
3		UP	MEM +	SEEK +					
4		DOWN	MEM —	SEEK —					
5		X	INPUT SEL	UP	UP		MEM+	UP	
6		X	BAND	DOWN	DOWN		MEM-	DOWN	
7		X	SRC	SRC	SRC		SRC	SRC	
8		X	MUTE	MUTE	X		X	MUTE	
9		X	X	X	X		X	PHONE ANSWER	
10		X	X	X	X		X	PHONE CLOSE	

FUNC.	HARDSTONE7 HS DPM8G PHONOCAR N6205	MACROM2 M-DVD5551R M-DVD6545R	NON USATO NOT USED	BECKER TRAFFIC PRO Solo su richiesta	MACROM3 M-DVD6555R M-DVD6556R PHONOCAR VM041 IR	MACROM4 M-DVD5542R M-DVD5561R M-DVD5562R M-DVD5541R	NON USATO NOT USED	ZENEC 3 ZE-NC520 ZE-NC524
	FILO E IR	IR	60/61/62 63/64/65 66	FILO	FILO E IR	FILO E IR		FILO E IR
FLASH	58	59		67	68	69	70/71/72	73
1	VOLUME +							
2	VOLUME —							
3	SEEK +							
4	SEEK —							
5	UP	PLAY/PAUSA		MODE	UP	PLAY/PAUSE		BAND/STOP
6	DOWN	STOP/BAND		X	DOWN	BAND		DOWN
7	SOURCE	MODE		X	SRC	SRC		SRC
8	MUTE	MUTE		X	MUTE	MUTE		MUTE
9	X	X		X	PHONE ANSWER	PHONE ANSWER		PHONE ANSWER
10	X	X		X	PHONE CLOSE	PHONE CLOSE		PHONE CLOSE

		UNICAN PLUS				TABELLE RADIO RADIO TABLES		07.1217 REV 2.17 da/from FWP007UNUN209_85_2C	
FUNC.	NON USATO NOT USED	JVC2	ALPINE4	PIONEER2	PIONEER2	PHONOCAR 4 VM05	NON USATO NOT USED	BLAUPUNKT 2 ATLANTA110 MADRID210 TORONTO410BT SAN FRANCISCO310	BLAUPUNKT NEW YORK 800
		FILO E IR	FILO E IR	IR	FILO	FILO E IR		FILO E IR	FILO E IR
FLASH	74	75	76	77	78	79	80/81/82	83	84
1	VOLUME +								
2	VOLUME —								
3		UP				> (RIC.RADIO)		SEEK +	
4		DOWN				>>  (TRACK +)		SEEK —	
5		SEEK +	SEEK +	SEEK +	SEEK +	PLAY		UP	OK
6		SEEK —	SEEK —	SEEK —	SEEK —	BAND		DOWN	DOWN
7		SRC	SRC	SRC	SRC	SRC		SOURCE	SOURCE
8		MUTE	MUTE	MUTE	MUTE	MUTE		MUTE	MUTE
9		PHONE ANSWER	PHONE ANSWER	X	PHONE ANSWER	PHONE ANSWER		PHONE ANSWER	PHONE ANSWER
10		PHONE CLOSE	PHONE CLOSE	X	PHONE CLOSE	PHONE CLOSE		PHONE CLOSE	PHONE CLOSE

FUNC.	PHONOCAR 5 VM066	TV DAS	NON USATO NOT USED	BLAUPUNKT NEW YORK 800 resistiva	NON USATO NOT USED	PHONOCAR 6 VM037	SONY HW OLD	PIONEER HW OLD	HARDSTONE8 HS-DPM71 HS-DPM64 HS-DPM69	PHONOCAR 7 VM033
	FILO E IR	IR		FILO		FILO E IR	FILO	FILO	FILO E IR	FILO E IR
FLASH	85	86	87/88/89	90	91	92	93	94	95	96
1	VOLUME +									
2	VOLUME —									
3	SEEK +									
4	SEEK —									
5	PLAY/PAUSE	X		X		UP	MEM +	MEM +	>>	UP
6	X	X		X		DOWN	MEM -	MEM -	<<	DOWN
7	SRC	X		SRC or PHONE ANSWER		MODE	SRC	SRC	SOURCE	SRC
8	MUTE	X		MUTE or PHONE CLOSE		MUTE	MUTE	MUTE	MUTE	MUTE
9	PHONE ANSWER	X		PHONE ANSWER or SRC		X	X	X	PHONE ANSWER/ BACK	X
10	PHONE CLOSE	X		PHONE CLOSE or MUTE		X	X	X	PHONE CLOSE/ ROOT	X

FUNC.	MACROM 5 M-DVD7702 M-DVD7701 M-DVD7602 M-DVD7601		CLARION 2 NX-501E NX-502E NX-503E NX-404E NX-504E		WR9210 RADIO 500	BLACKSTONE BS-ARM11	RADIO JEEP PHONOCAR	RADIO AUDI A4 PHONOCAR
	IR		FILO E IR		FILO	FILO E IR	FILO E IR	FILO E IR
FLASH	97		98		99	100	101	102
1	VOLUME +							
2	VOLUME —							
3	SEEK +		MEM + / SCAN +		SEEK +			
4	SEEK —		MEM — / SCAN —		SEEK —			
5	RIGHT		SCAN +		SOURCE	X	X	X
6	LEFT		SCAN —		MUTE	X	X	X
7	SRC		MUTE		X	SOURCE	SOURCE	SOURCE
8	MUTE / PWR		TA		X	MUTE	MUTE	MUTE
9	AMS/PHONE ANSWER		PHONE ANSWER		X	PHONE ANSWER	PHONE ANSWER	X
10	BAND/PHONE CLOSE		PHONE CLOSE/BAND		X	PHONE CLOSE	PHONE CLOSE	X

			UNICAN PLUS			TABELLE RADIO RADIO TABLES			07.1217 REV 2.17 da/from FWP007UNUN209_85_2C		
FUNC.	PIONEER FILARE OLD2	NON USATO NOT USED	ECCLIPSE 4 AVN827GA	PHONOCAR 8 VM08	CONSOLI 1	JVC3	PHNOCAR 9 RENAULT CAPTURE	PHONOCAR 10 VM025 - VM026	NON USATO NOT USED	AUDIOLINK CASKA FOR YOU	*BLAUPUNKT Brisbane 230 Stockholm 370 HARDWARE DEDICATED
	FILO E IR		FILO	FILO E IR	FILO E IR	FILO	FILO E IR	FILO E IR	111 112 113	FILO	FILO RES
FLASH	103	104	105	106	107	108	109	110		114	115
1	VOLUME +										
2	VOLUME —										
3	MEM +		SEEK +								
4	MEM -		SEEK —								
5	SEEK +		SOURCE	SOURCE	UP	BAND +	SOURCE	SOURCE		X	SOURCE
6	SEEK -		MUTE	MUTE	DOWN	BAND —	MUTE	MUTE		X	MUTE
7	SRC		PHONE ANSWER	X	SOURCE	SRC	X	X		SRC	PHONE ANSWER
8	MUTE		VOICE	X	MUTE	MUTE	X	X		MUTE	PHONE CLOSE
9	X		PHONE ANSWER / CLOSE	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER	X		PHONE ANSWER	X
10	X		PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	X		PHONE CLOSE	X

**ATTENZIONE**

IL PROFILO RADIO 23 (ECLIPSE AVN2227P) SI PUO' AVERE PERDENDO I PROFILI RADIO 6 (PIONEER) E 7 (SONY).

IL PROFILO 90 PERMETTE DI VEDERE FINO AD 8 TASTI MA GESTISCE SOLO 6 FUNZIONI SULLA RADIO.

<sup>(1)</sup>LA RADIO PHONOCAR VM029 HA SOLO LE SEGUENTI FUNZIONI: VOLUME-, VOLUME+, SEEK-, SEEK+, MODE E MUTE.

PER IL PROFILO RADIO 105 (ECLIPSE AVN827GA) LE FUNZIONI 7 E 10 SERVONO PER L'APPRENDIMENTO DEI TASTI TELEFONO

IL PROFILO RADIO 108 (JVC3) ATTIVA L'OPZIONE n°22

**CAUTION**

YOU CAN HAVE RADIO PROFILE 23 BUT IT'S LOST RADIO PROFILE 6 (PIONEER) AND PROFILE RADIO 7 (SONY).

IT'S POSSIBLE TO SEE 8 BUTTONS/LEVERS WITH PROFILE 90, BUT YOU CAN TO MANAGE ONLY 6 FUNCTIONS OF THE RADIO.

<sup>(1)</sup>PHONOCAR RADIO VM029 HAS ONLY THE FOLLOWING FUNCTIONS: VOLUME-, VOLUME+, SEEK-, SEEK+, MODE AND MUTE.

PROFILE RADIO 105 (ECLIPSE AVN827GA) FUNCTIONS 7 AND 10 ARE LEARNING KEY TELEPHONE

PROFILE RADIO 108 (JVC 3) ENABLE THE OPTION N° 22

MODELLO RADIO / RADIO MODEL	ADATTATORE RADIO/ RADIO ADAPTER
CLARION, JVC; MACROM M-DVD5542R, M-DVD5561R, M-DVD5562R; BLAUPUNKT NEW YORK 800; PHONOCAR VM033, VM037, VM029, VM057; CONSOLI 1;	CBL007UNJV12
PIONEER; SONY; PHONOCAR VM040 (flashes 7), VM041 (flashes 7), **VM024, VM025, VM026; *GRUNDIG DELPHI X350BT, DELPHI X440BT; BLAUPUNKT NEW YORK 800 RESISTIVA; WR9210 RADIO 500.	CBL007UNPI12
ALPINE.	CBL007UNAL22
KENWOOD.	CBL007UNKE11
PANASONIC; PHONOCAR FORYOU, CMU128, CM123, VM020, VM021, DM736, VM016, VM017, VM030, VM031, VM032, VM036, VM050, N6205, VM066, VM081; HARDSTONE HS DPM61, HS DPM62, HS DPM63, HS DPM31, HS DPM7G, HS DPM8G, HS DPM71, HS DPM69, HS DPM64; MACROM M-DVD6555R, M-DVD6556R; RADIO JEEP; RADIO AUDI A4.	CBL007UNPN21
BLAUPUNKT; BLAUPUNKT 2 ATLANTA110, MADRID210, TORONTO410BT, SAN FRANCISCO 310.	CBL007UNBL12
*VDO.	CBL007UNVD11
ECLIPSE AVN2227P, AVN4429, AVN726EE. BLAUPUNKT Brisbane 230 Stockholm 370 (USARE SOLO FILO VIOLA ESU KEY1/USE VIOLET ONLY TO KEY1)	CBL007UNEL11
BLACHSTONEBS-ARM11 Radio ad apprendimento resistivo, si deve impostare sulla radio 10kΩ, il cambio sorgente è sul filo blu della radio (MODE-KEY) da collegare con il nostro marrone, il filo rosa della radio (AD-KEY) va collegato con il nostro viola ed il filo nero della radio con il nostro nero. / Radio resistive to learning, to be set on 10k radio, the transmission source is on the blue wire to the radio (MODE-KEY) to be connected with our brown, the pink wire to the radio (AD-KEY) should be connected with our purple and the black wire to the radio with our black.	
<b>* DISPONIBILE SOLO CON HARDWARE DEDICATO / AVAILABLE ONLY WITH DEDICATED HARDWARE</b>	
<b>** TAGLIARE FILO IN POSIZIONE 2 DEL MICROFIT / TO CUT WIRE IN POSITION 2 OF MICROFIT.</b>	

