
		UNICO DUAL PLUS				TABELLE RADIO RADIO TABLES			19.06.19 REV 1.19 da/from	
FUNC.	CLARION	KENWOOD	JVC	PIONEER		SONY PHONOCAR VM040/VM041 Alpine IVE-W560BT IVE-W560BT-R Solo su richiesta versione filo.		ALPINE	VDO	PANASONIC
	FILO E IR	FILO E IR	FILO E IR	FILO	IR	FILO	IR	FILO E IR	IR	FILO E IR
FLASH	1	2	3	4		5		6	7	8
1	VOLUME —									
2	VOLUME +									
3	SEEK —									
4	SEEK +									
5	FUNC	SOURCE	SOURCE	MODE	MODE	SOURCE	SOURCE	SOURCE	SOURCE	MODE
6	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE
7	BAND	UP	UP	UP	BAND	UP	OFF	UP	UP	PWR
8	DISP	VOICE	DOWN	DOWN	UP	DOWN	UP	DOWN	DOWN	PROG
9	TA	PHONE ANSWER	PHONE ANSWER	X	DOWN	X	DOWN	PHONE ANSWER	X	X
10	INPUT SEL	PHONE CLOSE	PHONE CLOSE	X	FUNC	X	BAND	PHONE CLOSE	X	X


FUNC.	PANASONIC CAR AV	NOT USED	BLAUPUNKT	NOT USED	PHONOCAR VM040 ZENEC ZE-MC194	NOT USED	ECLIPSE AVN2227P AVN4429 AVN726EE Solo su richiesta Only on request	NOT USED	ECLIPSE AVN8826 CD8445E CD4525E AVN726EE	MACROM	NOT USED
	FILO E IR		FILO E IR		FILO E IR		FILO		IR	IR	
FLASH	9	10 11 12	13	14 15	16	17 18 19	20	21 22	23	24	25
1	VOLUME —										
2	VOLUME +										
3	SEEK —										
4	SEEK +										
5	MODE		SOURCE		SOURCE		MODE		SOURCE	MODE	
6	MUTE		MUTE		MUTE		X		MUTE	MUTE	
7	PWR		UP		UP		X		UP	UP	
8	PROG		DOWN		DOWN		X		DOWN	DOWN	
9	X		OK		BAND		X		X	PLAY/PAUSA	
10	X		X		PWR		X		X	STOP/BAND	

FUNC.	PHONOCAR 1 FORYOU CMU128 CM123 VM020 VM021 VM024	PHONOCAR 2 DM736 VM016 MACROM M-DVD4650R IR	PHONOCAR 3 ⁽¹⁾ VM029 VM030 VM031 VM032 VM036	NOT USED 29 30 31 32 33 34 35 36 37	ZENEC1 ZE-MC192 ZE-NC2040 XZENT XT8020	ZENEC2 (ZE-MC192/ SMART DIAL REMOTE CONTROL)	HARDSTONE 1 HS DPM62 HS DPM63	HARDSTONE 2 HS DPM30
	FILO E IR	FILO E IR	FILO E IR		FILO E IR	FILO E IR	FILO E IR	IR
FLASH	26	27	28		38	39	40	41
1	VOLUME —							
2	VOLUME +							
3	SEEK —					DOWN	SEEK —	
4	SEEK +					UP	SEEK +	
5	MODE	MODE	MODE		SOURCE	OK (CONF.SEL)	MODE	SRC
6	MUTE	MUTE	MUTE		MUTE	MEMOR. RADIO	MUTE	MUTE
7	PLAY/PAUSE	PLAY/PAUSE	PLAY/PAUSE		BAND/STOP	X	BAND	BAND
8	BAND	BAND	BAND		DOWN	X	<<	RDM
9	INT	REPEAT	PHONE ANSWER		UP	X	>>	RPT
10	REPEAT	POWER	PHONE CLOSE		OK	X	POWER	SEL

		UNICO DUAL PLUS			TABELLE RADIO RADIO TABLES			19.06.19 REV 1.19 da/from		
FUNC.	HARDSTONE 3 HS DPM31 HS DPM61 PHONOCAR VM017 VM018 VM035 IR	HARDSTONE 4 HS DPM36 HS DPM70	HARDSTONE 5 HS CD1970	NOT USED	ALPINE 2 RUE-4912 DVD	ALPINE 3 RUE-4912 NAVI	PANASONIC 3 RM-600D	ECLIPSE 3 RMC101	HARDSTONE 6 HS-DPM7G	NOT USED
	FILO E IR	IR	IR		IR	IR	IR	IR		
FLASH	42	43	44	45 46	47	48	49	50	51	52 53
1	VOLUME —									
2	VOLUME +									
3	SEEK —									
4	SEEK +									
5	SRC	SRC	MODE		SRC	SRC	UP	SRC	MODE	
6	MUTE	MUTE	MUTE		MUTE	UP	DOWN	UP	MUTE/RIFIUTA	
7	BAND	BAND	BAND		UP	DOWN	BAND	DOWN	BAND/	
8	UP	AST	RPT		DOWN	X	PLAY	POWER	RPT	
9	PHONE ANSWER	RPT	SEL		X	X	X	X	SEL	
10	PHONE CLOSE	RDM	NEXT 10 TRACK		X	X	X	X	PWR	


FUNC.	HARDSTONE7 HS DPM8G PHONOCAR N6205	MACROM2 M-DVD5551R M-DVD6545R	PANASONIC4 CQ-D1703N	NOT USED	CASKA CA1621G	MACROM3 M-DVD6555R M-DVD6556R PHONOCAR VM041 IR	MACROM4 M-DVD5542R M-DVD5561R M-DVD5562R FILO E IR M-DVD5541R	NOT USED	ZENEC 3 ZE-NC520 ZE-NC524	BECKER TRAFFIC PRO <small>Solo su richiesta Only on request</small>	QUANTUM
	FILO E IR	IR	IR	57 58 59 60	FILO E IR	FILO E IR		64 65 66	FILO E IR	FILO	FILO E IR
FLASH	54	55	56		61	62	63		67	68	69
1	VOLUME —										
2	VOLUME +										
3	SEEK —										P —
4	SEEK +										P +
5	MODE	MODE	SRC/PWR		MODE	SRC	SRC		SRC	MODE	
6	MUTE	MUTE	MUTE		MUTE	MUTE	MUTE		MUTE	X	
7	BAND	RDM	SEL		BAND	UP	PLAY/PAUSE		BAND/STOP	X	
8	RPT	RPT	RDM		>>	DOWN	BAND		DOWN	X	
9	PLAY/PAUSE	PLAY/PAUSE	RPT		<<	PHONE ANSWER	PHONE ANSWER		PHONE AN- SWER	X	
10	POWER	STOP/BAND	SCAN		RPT	PHONE CLOSE	PHONE CLOSE		PHONE CLOSE	X	

FUNC.	PHONOCAR 4 VM050	NOT USED	BLAUPUNKT 2 ATLANTA110 MADRID210 TORONTO410BT SAN FRANCISCO310	PHONOCAR 5 VM066	NOT USED	PHONOCAR 6 VM037	BLAUPUNKT NEW YORK 800 (resistive)	HARDSTONE 8 HS-DPM71 HS-DPM64 HS-DPM69
	FILO E IR	71 72 73	FILO E IR	FILO E IR	76 77 78 79	FILO E IR	FILO	FILO E IR
FLASH	70		74	75		80	81	82
1	VOLUME —							
2	VOLUME +							
3	>> (NEXT TRACK)	SEEK —						
4	> (Radio Tuner)	SEEK +						
5	SRC		SOURCE	SRC		SRC	SRC or PHONE ANSWER	SOURCE/PWR
6	MUTE		MUTE	MUTE		MUTE	MUTE or PHONE CLOSE	MUTE
7	PLAY/PAUSE		UP	PLAY		BAND	X	<<
8	BAND		DOWN	POWER		UP	X	>>
9	PHONE ANSWER		PHONE ANSWER	PHONE ANSWER		DOWN	PHONE ANSWER or SRC	PHONE ANSWER/BACK
10	PHONE CLOSE		PHONE CLOSE	PHONE CLOSE		PLAY	PHONE CLOSE or MUTE	PHONE CLOSE/ROOT

	UNICO DUAL PLUS	TABELLE RADIO RADIO TABLES	19.06.19 REV 1.19 da/from
---	------------------------	---------------------------------------	---------------------------

FUNC.	PHONOCAR 7 VM033	MACROM 5 M-DVD7702 M-DVD7701 M-DVD7602 M-DVD7601	CLARION 2 NX-501E NX-502E NX-503E NX-404E NX-504E	BLACKSTONE BS-ARM11	RADIO JEEP PHONOCAR	RADIO AUDI A4 PHONOCAR	NOT USED	PHONOCAR 8 VM081
	FILO E IR	IR	FILO E IR	FILO E IR	FILO E IR	FILO E IR		FILO E IR
FLASH	83	84	85	86	87	88	89	90
1	VOLUME —							
2	VOLUME +							
3	SEEK —							
4	SEEK +							
5	SRC	SRC	SOURCE/PWR	SOURCE	SOURCE	SOURCE		SOURCE
6	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE		MUTE
7	BAND	PLAY/PAUSE	RDM	X	X	X		X
8	UP	RIGHT	TA	X	X	X		X
9	DOWN	PHONE ANSWER	PHONE ANSWER	X	PHONE ANSWER	X		PHONE ANSWER
10	ENTER	PHONE CLOSE	PHONE CLOSE/BAND	X	PHONE CLOSE	X		PHONE CLOSE

FUNC.	PHONOCAR 9 RADIO CAPTUR	PHONOCAR 10 VM025 VM026	RADIO AD APPRENDIMENTO RESISTIVO 8 TASTI RADIO WITH RESISTIVE LEARNING SYSTEM 8 BUTTONS	NOT USED	PHONOCAR 11 VM057	KENWOOD NRM
	FILO E IR	FILO E IR	FILO		FILO	FILO
FLASH	91	92	93	94	95	96
1	VOLUME —					
2	VOLUME +					
3	SEEK —					
4	SEEK +					
5	SOURCE	SOURCE	SRC	X	SOURCE	SOURCE
6	MUTE	MUTE	MUTE	X	MUTE	MUTE
7	PLAY/PAUSE	X	X	X	UP	UP
8	RPT	X	X	X	DOWN	VOICE
9	PHONE ANSWER	X	PHONE ANSWER	X	PHONE ANSWER	PHONE ANSWER
10	PHONE CLOSE	X	PHONE CLOSE	X	PHONE CLOSE	PHONE CLOSE

	UNICO DUAL PLUS	TABELLE RADIO RADIO TABLES	19.06.19 REV 1.19 da/from
---	------------------------	---------------------------------------	----------------------------------

COLLEGAMENTI ECLIPSE FILARE (numero lampeggi 20):

AVN2227P: marrone tacche grigie (radio) va con il Viola (interfaccia)/ marrone tacche grigie - Nero (radio) va con il Marrone (interfaccia).

AVN4429 e AVN726EE: marrone tacche grigie (radio) va con il Marrone (interfaccia)/ marrone tacche grigie - Nero (radio) va con il Viola

ECLIPSE WIRE CONNECTION (number flashes 20):

AVN2227P: brown - gray (radio) with violet (interface)/ brown—gray - black (radio) with brown (interface).

AVN4429 e AVN726EE: brown - gray (radio) with brown (interface)/ brown - gray - black (radio) with violet (interface).

ATTENZIONE

I PROFILI 4 (PIONEER), 5 (SONY), 7 (VDO) E 20 (ECLIPSE) SI ESCLUDONO A VICENDA.

NON INSERIRE IL PONTICELLO J5 PER BLAUPUNKT 2 (ATLANTA110-MADRID210-TORONTO 410 BT, SAN FRANCISCO 310) E BLAUPUNKT NEW YORK 800.


⁽¹⁾LA RADIO PHONOCAR VM029 HA SOLO LE SEGUENTI FUNZIONI: VOLUME-, VOLUME+, SEEK-, SEEK+, MODE E MUTE.


CAUTION

PROFILES 4 (PIONEER), 5 (SONY), 7 (VDO) AND 20 (ECLIPSE) ARE MUTUALLY EXCLUSIVE.

THE JUMPER J5 DOESN'T BE SET IF YOU INSTALL A BLAUPUNKT 2 (ATLANTA 110-MADRID 210- TORONTO 410 BT, SAN FRANCISCO 310) AND BLAUPUNKT NEW YORK 800.

⁽¹⁾PHONOCAR RADIO VM029 HAS ONLY THE FOLLOWING FUNCTIONS: VOLUME-, VOLUME+, SEEK-, SEEK+, MODE AND MUTE.

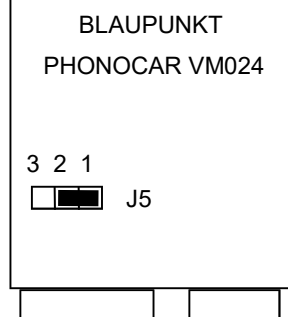

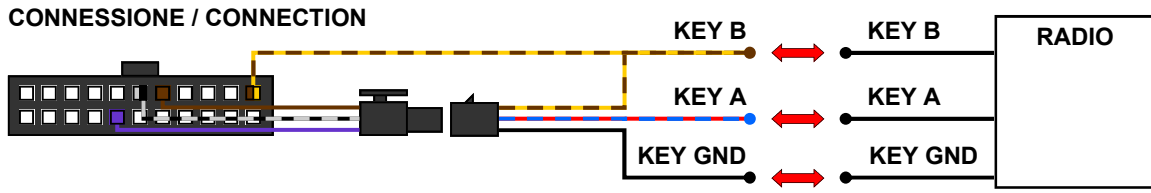MODELLO RADIO / RADIO MODEL	ADATTATORE RADIO/ RADIO ADAPTER
CLARION, JVC; MACROM M-DVD5542R, M-DVD5561R, M-DVD5562R; BLAUPUNKT NEW YORK 800; PHONOCAR VM033, VM037, VM029, VM057; CONSOLI 1;	CBL007UNJV12
PIONEER; SONY; PHONOCAR VM040 (flashes 7), VM041 (flashes 7), **VM024, VM025, VM026; * GRUNDIG DELPHI X350BT, DELPHI X440BT; BLAUPUNKT NEW YORK 800 RESISTIVA; WR9210 RADIO 500.	CBL007UNPI12
ALPINE. Le radio Alpine IVE-W560BT IVE-W560BT-R hanno hardware dedicato.	CBL007UNAL22
KENWOOD.	CBL007UNKE11
PANASONIC; PHONOCAR FORYOU, CMU128, CM123, VM020, VM021, DM736, VM016, VM017, VM030, VM031, VM032, VM036, VM050, N6205, VM066, VM081; HARDSTONE HS DPM61, HS DPM62, HS DPM63, HS DPM31, HS DPM7G, HS DPM8G, HS DPM71, HS DPM69, HS DPM64; MACROM M-DVD6555R, M-DVD6556R; RADIO JEEP; RADIO AUDI A4.	CBL007UNPN21
BLAUPUNKT; BLAUPUNKT 2 ATLANTA110, MADRID210, TORONTO410BT, SAN FRANCISCO 310.	CBL007UNBL12
*VDO.	CBL007UNVD11
ECLIPSE AVN2227P, AVN4429, AVN726EE.	CBL007UNEL11
RADIO AD APPRENDIMENTO RESISTIVO 8 TASTI / RADIO WITH RESISTIVE LEARNING SYSTEM 8 BUTTONS	CBL039UNFY11
<p>CONNESSIONE / CONNECTION</p> 	
<p>BLACHSTONEBS-ARM11</p> <p>Radio ad apprendimento resistivo, si deve impostare sulla radio 10kΩ, il cambio sorgente è sul filo blu della radio (MODE-KEY) da collegare con il nostro marrone, il filo rosa della radio (AD-KEY) va collegato con il nostro viola ed il filo nero della radio con il nostro nero. / Radio resistive to learning, to be set on 10k radio, the transmission source is on the blue wire to the radio (MODE-KEY) to be connected with our brown, the pink wire to the radio (AD-KEY) should be connected with our purple and the black wire to the radio with our black.</p>	
* DISPONIBILE SOLO CON HARDWARE DEDICATO / AVAILABLE ONLY WITH DEDICATED HARDWARE	
<p>** TAGLIARE FILO IN POSIZIONE 2 DEL MICROFIT / TO CUT WIRE IN POSITION 2 OF MICROFIT.</p> 