



# UNICO DUAL 1C ALPINE INSTALLATION MANUAL



## **READ THE MANUAL CAREFULLY BEFORE CONTACTING TECHNICAL SUPPORT**

**UNICO DUAL 1C** is an adapter for connecting OEM steering wheel controls.

Its compatibility is for vehicles with **CANBUS 1 wire (GM LAN)**.

The unit recovers the steering wheel controls, the service outputs: ignition, lights, reverse, handbrake and speed signal (the presence of the outputs varies from vehicle to vehicle), and the alarm sounds of the original system (via external active buzzer).

**The display is not recovered.** The selection of the canbus protocol is in AUTO SELECTION.

**RADIO compatibility** is for **ALPINE** equipped with JACK input for remote control.





**For correct installation please follow the steps described in this document:**

## **STEP NUMBER 1: DIP SWITCHES**


The module has 4 DIP SWITCHES.

They are not to be used unless the module needs to be updated.

Follow the table below.

|  <b>SET DIP SWITCHES WITH UNICO DUAL MODULE NOT POWERED</b>  |           |  |
|--|-----------|--|
| CANBUS 1C PROTOCOL   | TUTTI OFF |   |
| MODULE UPDATE  | DIP 4 ON  |  |


**USE DIP SWITCH 4 FOR UPDATE,  
ONCE THE OPERATION IS COMPLETED, TURN IT BACK TO OFF**
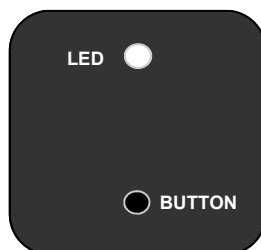
## **WARRANTY**


**THIS PRODUCT IS COVERED BY TWO-YEAR GUARANTEE FOR ANY MANUFACTURING TROUBLES.  
THE WARRANTY IS VALID IF ACCOMPANIED BY THE INVOICE OF PURCHASE**

The information in this guide are purely for information purposes, therefore, are subject to change without notice.

At the time of publication the information is correct and reliable. However Paser can not be held responsible for any consequences resulting from errors or omissions in this manual. Paser reserves the right to improve / change the product or manual without obligation to notify users.




# UNICO DUAL 1C ALPINE INSTALLATION MANUAL

 


## STEP NUMBER 2: CONNECTIONS



**WARNING! MANDATORY CONNECTIONS ARE:**  
RED TO +12 VOLTS / BLACK TO GND / GREEN TO CAN WIRE  
**DO NOT USE WIRES PRESENT IN THE CABLE NOT MENTIONED BELOW**

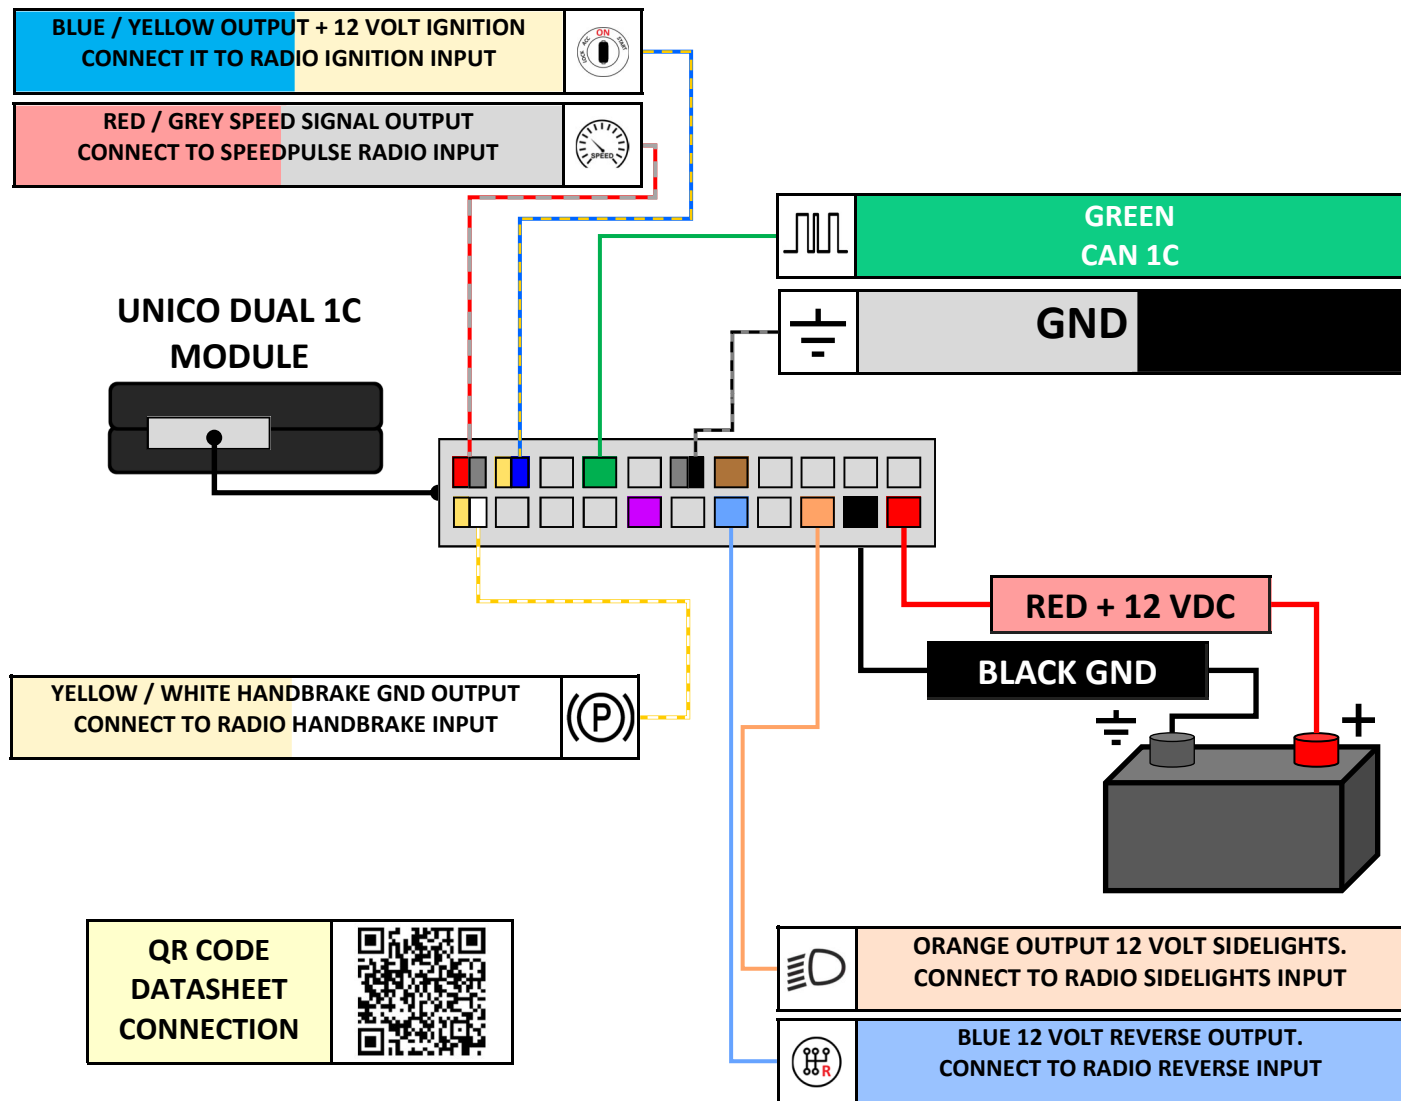


## CONNECT THE RADIO ADAPTER TO THE SWC INPUT OF THE RADIO

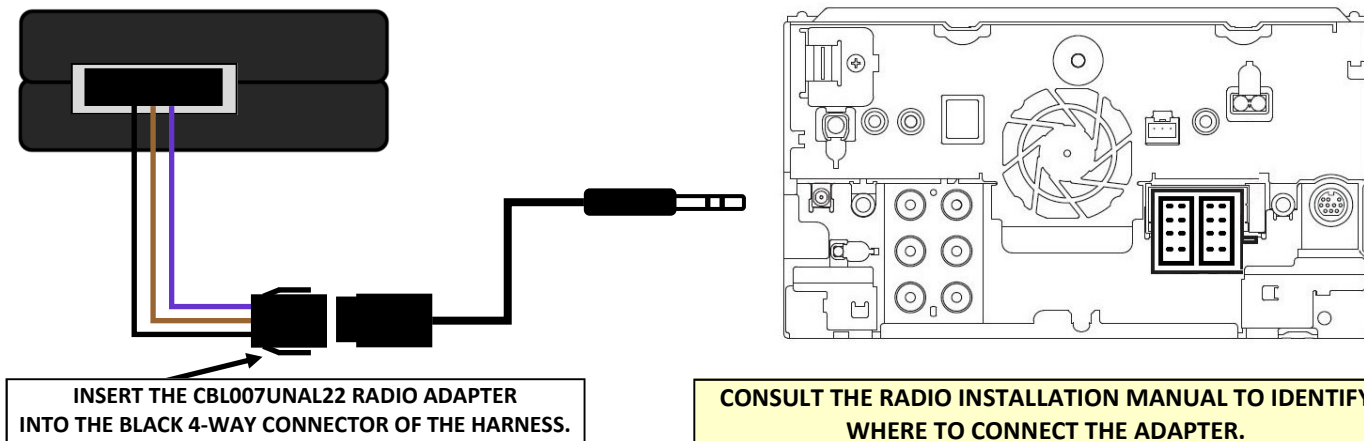



# UNICO DUAL 1C ALPINE INSTALLATION MANUAL

 

## VEHICLE CONFIGURATION CONTROL MANAGEMENT

**UNICO DUAL 1C** allows you to set the vehicle configurations normally managed by the OEM radio.

The procedure is very simple.


There are 6 available configurations as described in the table below.

Each function is represented by a number of BEEPS of the buzzer.

Each submenu is represented by a second number of BEEPS.

To access the settings menu, you must perform the following steering wheel button sequence:

**MUTE / SOURCE / MUTE / SOURCE**

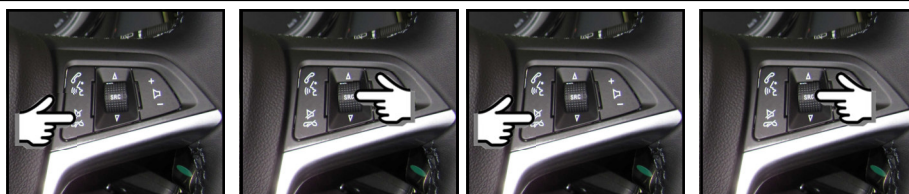

Entering the MENU is confirmed by a series of BEEPS from the buzzer.

Now the buzzer will emit a BEEP followed by another BEEP.



This means that we can set the first available function, i.e. AUTOMATIC FAN SPEED.

Use the **SEEK** buttons to navigate the FUNCTIONS (use the WHEEL).

Use the **VOLUME** buttons to navigate the SETTINGS.

To confirm a setting, press **SOURCE**.


Confirmation of the setting will be highlighted by a series of BEEPS from the buzzer.

|  |              |  |                |
|---|--------------|--|----------------|
| FUNCTIONS   | PRIMARY BEEP | SETTINGS   | SECONDARY BEEP |
| AUTO FAN SPEED  | 1            | LOW  | 1              |
|   |              | MEDIUM   | 2              |
|   |              | HIGH   | 3              |
| CLIMATE CONTROL MODE  | 2            | OFF  | 1              |
|   |              | ON   | 2              |
|   |              | LAST SETTING   | 3              |
| AUTO REAR DEMIST  | 3            | OFF  | 1              |
|   |              | ON   | 2              |
| REAR AUTO WIPE IN REVERSE   | 4            | OFF  | 1              |
|   |              | ON   | 2              |
| EXTERIOR AMBIENT LIGHTING   | 5            | OFF  | 1              |
|   |              | ON   | 2              |
| LIGHTING DURATION UPON EXIT FROM VEHICLE  | 6            | OFF  | 1              |
|   |              | 30 SEC.  | 2              |
|   |              | 1 MIN  | 3              |
|   |              | 2 MIN  | 4              |

**TO EXIT PROGRAMMING, REMOVE THE IGNITION**


 
# UNICO DUAL 1C ALPINE INSTALLATION MANUAL



## INFORMATION



### MODULE RESET



**RESET DOES NOT DELETE PREVIOUSLY CHANGED OPTIONS!!!**

**ONLY IF NECESSARY, RESET THE MODULE USING THE PLASTIC NAIL (SUPPLIED) AS DESCRIBED BELOW.**



PRESS AND HOLD THE RESET BUTTON FOR  
10 SECONDS, THE LED WILL TURN OFF.  
REMOVE THE PLASTIC NAIL.  
THE RESET IS DONE.



## TROUBLESHOOTING



THE UNIT DOES NOT PERFORM ANY FUNCTION AND THE LED IS OFF.

CHECK POWER CONNECTION.

THE UNIT IS POWERED CORRECTLY, BUT IT DOES NOT PERFORM ANY FUNCTION AND THE LED FLASHES RED QUICKLY.

CHECK CANBUS CONNECTIONS.

THE UNIT IS POWERED CORRECTLY, THE CANBUS IS CONNECTED CORRECTLY, BUT IT DOES NOT PERFORM ANY FUNCTION AND THE LED FLASHES RED QUICKLY.

CANBUS SYNCHRONIZATION FAILS, CONTACT TECHNICAL SUPPORT.

THE UNIT, CORRECTLY CONNECTED, WITH THE GREEN LED LIT, DOES NOT CONTROL THE RADIO.

1. CHECK THAT THE RADIO ADAPTER IS CONNECTED TO THE RADIO.

## TECHNICAL CHARACTERISTICS

|   |           |
|---|-----------|
| POWER SUPPLY  | 10/16 VDC |
| ABSORPTION AT REST  | 0,001 A   |
| ABSORPTION WHEN WORKING   | 0,040 A   |
| MAX CHARGE IGNITION OUTPUT  | 2,000 A   |
| MAX CHARGE SIDELIGHTS / HANDBRAKE / REVERSE GEAR OUTPUT / SPEEDPULSE SIGNAL | 0,040 A   |

### WARRANTY

**THIS PRODUCT IS COVERED BY TWO-YEAR GUARANTEE FOR ANY MANUFACTURING TROUBLES.**

**THE WARRANTY IS VALID IF ACCOMPANIED BY THE INVOICE OF PURCHASE**

**READ THE MANUAL CAREFULLY BEFORE CONTACTING TECHNICAL SUPPORT.**

**CALL ONLY IF THE VEHICLE IS PRESENT**  
**AND WITH THE MODULE AT HAND**

**Technical Support: + 39 0141 - 947676**

The information in this guide are purely for information purposes, therefore, are subject to change without notice.

At the time of publication the information is correct and reliable. However Paser can not be held responsible for any consequences resulting from errors or omissions in this manual. Paser reserves the right to improve / change the product or manual without obligation to notify users.