

			UNICOM PLUS PEUGEOT			TABELLE RADIO RADIO TABLES			18.09.19 DA FROM FWP012PEUN29_85		
FUNC.	CLARION	KENWOOD	JVC	PIONEER UNICARS <small>EAGLE3.5 EAGLE2D EAGLE2DBT EAGLE2DGPS EAGLE2DNAV</small>		SONY PHONOCAR VM040-VM041 NAVIS NS-1770		ALPINE	VDO <small>FILARE SOLO SU RICHIESTA WIRED ONLY ON REQUEST</small>		PANASONIC
	FILO E IR	FILO E IR	FILO E IR	FILO	IR	FILO	IR	FILO	FILO	IR	FILO IR
FLASH	1	2	3	4		5		6	7		8
1	VOLUME —										
2	VOLUME +										
3	SEEK —										
4	SEEK +										
5	FUNC	SOURCE PHONE CLOSE	SOURCE	MODE	MODE	SOURCE	SOURCE	SOURCE	SOURCE	SOURCE	MODE
6	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	PRESET +	MUTE	MUTE
7	BAND	UP	UP	UP	UP	UP	UP	PHONE ANSWER	X	UP	PWR
8	DISP	VOICE	DOWN	DOWN	DOWN	DOWN	DOWN	PHONE CLOSE	X	DOWN	PROG
9	TA	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER	BAND	PHONE ANSWER	BAND	UP	X	X	X
10	INPUT SEL	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	FUNC	PHONE CLOSE / OFF	PHONE CLOSE / OFF	DOWN	X	X	X

FUNC.	PANASONIC CAR AV	DIGITAL DYNAMIC 2005	DIGITAL DYNAMIC 2006	DIGITAL DYNAMIC 2007	BLAUPUNKT	AUDIOMEDIA 1 AKAI AMV367RVD AM- V368RVD AMV308RVD AMV358DD GSM649 MDM579 MSM349 MDF359 SVT8000DVD VRX278RUSB VRX279RUSB	AUDIOMEDIA 2 FMS476DD	AUDIOMEDIA 3 AMV477VD AMV578VD AMV497DD GSM779 MSM479 AUTOSONIK NURBURGRING 1700 PHONOCAR VM040 DIGITAL DYNAMIC DYMAGE M700 IR ZENEC ZE-MC194
	FILO E IR	IR	IR	IR	FILO IR	IR	IR	FILO IR
FLASH	9	10	11	12	13	14	15	16
1	VOLUME —							
2	VOLUME +							
3	SEEK —							
4	SEEK +							
5	MODE	MODE	MODE	MODE	SOURCE	SOURCE	SOURCE	SOURCE
6	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE
7	PWR	PWR	PWR	PWR	UP	UP	UP	UP
8	PROG	X	X	X	DOWN	DOWN	DOWN	DOWN
9	X	X	X	X	OK	BAND	BAND	BAND
10	X	X	X	X	X	SEL	SCAN	PWR

FUNC.	AUDIOMEDIA 4 AM10RUSB	AUDIOMEDIA 5 AMV397DD AMV377VD	LG	ECLIPSE AVN2227P AVN4429 AVN726EE	AUTOSONIK SUZUKA 3400 LE MANS 1200 BAHRAIN 1100 KENVOX AFRICA TWIN 1400 RAPTOR 1200 LOW RIDER 1100	AUTOSONIK HOCKEHEIM 1150 MONTECARLO 1350 INDIANAPOLIS 2650 JEREZ-1160	ECLIPSE AVN8826 CD8445E CD4525E AVN726EE	MACROM	OSIO
	IR	IR	IR	FILO	FILO IR	IR	IR	FILO IR	IR
FLASH	17	18	19	20	21	22	23	24	25
1	VOLUME —								
2	VOLUME +								
3	SEEK —								
4	SEEK +								
5	SOURCE	SOURCE	SOURCE	MODE	SOURCE	SOURCE	SOURCE	MODE	MODE
6	MUTE	MUTE	MUTE	X	MUTE	MUTE	MUTE	MUTE	MUTE
7	BAND	UP	BAND	X	PLAY/PAUSA	BAND	UP	UP	POWER
8	SEL	DOWN	DISP	X	STOP	SEL	DOWN	DOWN	PLAY
9	DISP	BAND	SEL	X	X	X	X	PLAY/PAUSE	STOP
10	PWR	PWR	NUMBER	X	X	X	X	STOP/BAND	OPEN/CLOSE

FUNC.	PHONOCAR 1 FORYOU CMU128 CM123 VM020 VM021 VM024 FILO E IR DIGITALDYNAMIC DYNAMO M5 DYNAMO C10 DYNAMO C15	PHONOCAR 2 DM736 VM016 FILO E IR MACROM M-DVD4650R	PHONOCAR 3 ⁽¹⁾ VM029-VM030 VM031- VM032 VM036 AUTOSONIK DAYTONA 7000 FILO E IR UNICARS EAGLE3.5 EAGLE2D EAGLE2DBT EAGLE2DGPS EAGLE2DNAV	BELSON 1(NAVIX- 650 (DUAL ZONE) IR NAVIX-450	BELSON 2 (NAVIX-440)	BELSON 3 (NAVIX-750)	BELSON 4 BS3112	LG2
	IR	IR	IR	FILO IR	IR	IR	FILO IR	IR
FLASH	26	27	28	19	30	31	32	33
1	VOLUME —							
2	VOLUME +							
3	SEEK —							
4	SEEK +							
5	MODE	MODE	MODE	MODE	MODE	MODE	MODE	SRC
6	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE
7	PLAY/PAUSE	PLAY/PAUSE	PLAY/PAUSE	BAND	BAND	BAND	BAND	BAND
8	BAND	BAND	BAND	EQ	TA	EQ	SEL	DISP
9	INT	REPEAT	PHONE ANSWER	X	X	X	PHONE ANSWER	SEL
10	REPEAT	POWER	PHONE CLOSE	X	X	X	PHONE CLOSE	SHUFFLE

FUNC.	AUDIOMEDIA 6 AMV398D GDM979 GDF879 - GSM639 IR AUTOSONIK MONTECARLO 2010 DAYTONA 8000 INDIANAPOLIS 2600 INDIANAPOLIS 6100 Navi	AUDIOMEDIA 7 AKAI STV7800DVD	AUDIOMEDIA 8 GPS678DD GPS778VD AMV588VD	AUDIOMEDIA 9 AMV108RVD AMV208RVD	ZENEC1 ZE-MC192 ZE-NC2040 XZENT XT8020 DIGITALDYNAMIC DX650D DX700	ZENEC2 (ZE-MC192/SMART DIAL REMOTE CONTROL)	HARDSTONE 1 HS DPM62 HS DPM63	HARDSTONE 2 HS DPM30 AUTOSONIK MONTE FUJI 2350 DISTA VISION V1-D8200
	FILO IR	IR	IR	IR	FILO IR	FILO IR	FILO IR	IR
FLASH	34	35	36	37	38	39	40	41
1	VOLUME —							
2	VOLUME +							
3	SEEK —							
4	SEEK +							
5	SRC	SRC	SRC/POWER	SRC	SOURCE	OK (CONF.SEL)	MODE	SRC
6	MUTE	MUTE	MUTE	MUTE	MUTE	MEMOR. RADIO	MUTE	MUTE
7	UP	STOP	STOP	BAND	BAND/STOP	X	BAND	BAND
8	DOWN	OK	ENTER	REPEAT	DOWN	X	<<	RDM
9	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER	PLAY / PAUSE	UP	X	>>	RPT
10	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	POWER	OK	X	POWER	SEL

FUNC.	HARDSTONE 3 HS DPM31 HS DPM61 FILO E IR PHONOCAR VM017 VM018 FILO E IR VM035 IR	HARDSTONE 4 HS DPM36 HS DPM70	HARDSTONE 5 HS CD1970	EVUS DD710X	TV DIGITALE KENWOOD	ALPINE 2 RUE-4912 DVD	ALPINE 3 RUE-4912 NAVI	PANASONIC 3 RM-600D	ECLIPSE 3 RMC101
	FILO IR	IR	IR	IR	FILO IR	IR	IR	IR	IR
FLASH	42	43	44	45	46	47	48	49	50
1	VOLUME —								
2	VOLUME +								
3	SEEK —								
4	SEEK +								
5	SRC	SRC	MODE	MODE	X	SRC	SRC	UP	SRC
6	MUTE	MUTE	MUTE	MUTE	X	MUTE	UP	DOWN	UP
7	BAND	BAND	BAND	BAND	X	UP	DOWN	BAND	DOWN
8	UP	AST	RPT	POWER	X	DOWN	X	PLAY	POWER
9	PHONE ANSWER	RPT	SEL	PLAY/PAUSE	X	X	X	X	X
10	PHONE CLOSE	RDM	NEXT 10 TRACK	ENTER/TEL	X	X	X	X	X

FUNC.	HARDSTONE 6 HS-DPM7G	NAVIS NS-2360	SKYWAY GM4300	HARDSTONE7 HS DPM8G PHONOCAR N6205	MACROM2 M-DVD5551R M-DVD6545R	GRUNDIG DELPHI X350 BT DELPHI X440 BT Solo su richiesta Only on request	PANASONIC4 CQ-D1703N	AUTOSONIK SANTA MONICA 9118T IMOLA 912BT KENVOX SCRAMBLER 5200	DIGITAL DYNAMIC DYMAGE- N620	INNOVATE INVM3231
	FILO IR	IR	IR	FILO IR	FILO IR	IR	IR	IR	IR	
FLASH	51	52	53	54	55	56	57	58	59	60
1	VOLUME —									
2	VOLUME +									
3	SEEK —									
4	SEEK +									
5	MODE	MODE	MODE	MODE	MODE	MODE	SRC/PWR	SRC	SRC	SRC
6	MUTE/ PHONE CLOSE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE
7	BAND/ PHONE ANSWER	BAND	BAND/RDM	BAND	RDM	X	SEL	PHONE ANSWER	<<	<<
8	RPT	PLAY/PAUSE	PLAY/PAUSE	RPT	RPT	X	RDM	PHONE CLOSE	>>	>>
9	SEL	PHONE ANSWER	PSCN/RPT	PLAY/PAUSE	PLAY/PAUSE	X	RPT	POWER	PHONE ANSWER	PHONE ANSWER
10	PWR	PHONE CLOSE	POWER	POWER	STOP/BAND	X	SCAN	X	PHONE CLOSE	PHONE CLOSE

FUNC.	SKYWAY GM-7540 NAVI	CASKA CA1621G	MACROM3 M-DVD6555R M-DVD6556R FILO E IR NAVIS NS-1770 PHONOCAR VM041	MACROM4 M-DVD5542R M-DVD5561R M-DVD5562R FILO E IR M-DVD5541R DIGITAL DYNAMIC DYMAGE NF-630 UNICARS ITALIA EAGLEZD62NB IR KENVOX NINJA 7200 NINJA 7200 N FILO E IR	KENVOX 1 REPLICA 125	KENVOX 2 CAMEL 500	KENVOX 3 BRUTALE 3500	ZENEC 3 ZE-NC520 ZE-NC524	SCORPIOS1	PHONOCAR 4 VM050
	FILO IR	FILO E IR	IR	FILO IR	IR	IR	IR	FILO E IR	IR	FILO E IR
FLASH	61	62	63	64	65	66	67	68	69	70
1	VOLUME —									
2	VOLUME +									
3	SEEK —									
4	SEEK +									
5	MODE	MODE	SRC	SRC	SRC	X	SRC	SRC	SRC	SRC
6	MUTE	MUTE	MUTE	MUTE	POWER	X	MUTE/ POWER	MUTE	MUTE	MUTE
7	BAND	BAND	UP	PLAY/PAUSE	BAND	X	BAND/ RETURN	BAND/STOP	BAND	PLAY
8	PLAY/PAUSE	>>	DOWN	BAND	PLAY	X	PLAY/ PAUSE	DOWN	REPEAT	BAND
9	PHONE AN- SWER	<<	PHONE AN- SWER	PHONE ANSWER	PHONE ANSWER	X	ENTER	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER
10	PHONE CLOSE	RPT	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	X	MENU	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE

FUNC.	TV HELLAS	DISTA1 VISION V1-DB210	AUDIOMEDIA 10 AMV398DD	BLAUPUNKT 2 ATLANTA110 MADRID310 TORONTO410BT SAN FRANCISCO310	JVC2 KW-AVX840	BLAUPUNKT NEW YORK 800	TV DAS	PHONOCAR 5 VM066	DIGITAL DYNAMIC DYMAGE-M310
	IR	IR	IR	FILO IR	IR	FILO	IR	FILO IR	IR
FLASH	71	72	73	74	75	76	77	78	79
1	VOLUME —								
2	VOLUME +								
3	SEEK —								
4	SEEK +								
5	X	SRC	SRC	SOURCE	SOURCE	SOURCE or PHONE ANSWER	X	SRC	MODE
6	X	MUTE/POWER	MUTE	MUTE	MUTE	MUTE or PHONE CLOSE	X	MUTE	MUTE
7	X	BAND	UP	UP	UP	X	X	PLAY	PLAY/PAUSE
8	X	>/>>	DOWN	DOWN	DOWN	X	X	POWER	BAND
9	X	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER or SOURCE	X	PHONE ANSWER	RPT
10	X	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE or MUTE	X	PHONE CLOSE	POWER

FUNC.	DIGITALDYNAMIC DYNAMO-C30	DIGITALDYNAMIC DYNAMO-B60	AUTOSONIK TOURING-111 TROPHY BT-113	PHONOCAR 6 VM037	HARDSTONE8 HS-DPM71 HS-DPM69 HS-DPM64	PHONOCAR 7 VM033	MACROM 5 M-DVD7702 M-DVD7701 M-DVD7602 M-DVD7601	ALPINE4	CLARION 2 NX-501E NX-502E NX-503E NX-404E NX-504E
	IR	IR	IR	FILO IR	FILO IR	FILO IR	IR	FILO IR	FILO IR
FLASH	80	81	82	83	84	85	86	87	88
1	VOLUME —								
2	VOLUME +								
3	SEEK —								
4	SEEK +								
5	SRC	SRC	MODE	MODE	SOURCE/PWR	MODE	MODE	SOURCE	SOURCE/PWR
6	POWER	POWER	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE
7	PLAY/ PAUSE	PLAY/PAUSE	BAND	BAND	<<	BAND	Play-Pause / ENTER	UP	RDM
8	AUDIO	AUDIO	UP	UP	>>	UP	RIGHT	DOWN	TA
9	X	X	DOWN	DOWN	PHONE ANSWER/ BACK	DOWN	AMS/PHONE ANSWER	PHONE ANSWER	PHONE ANSWER
10	X	X	PLAY/PAUSE	PLAY/PAUSE	PHONE CLOSE/ ROOT	ENTER/PLAY/PAUSE	BAND/PHONE CLOSE	PHONE CLOSE	PHONE CLOSE /BAND

FUNC.	CLARION 2 NX-501E NX-502E NX-503E NX-404E NX-504E	BLACHSTONE BS-ARM11	RADIO JEEP PHONOCAR	RADIO AUDI A4 PHONOCAR	NC	ECLIPSE 4 AVN827GA	PHONOCAR 8 VM081	PHONOCAR 9 RADIO CAPTUR	PHONOCAR 10 VM025 VM026
	FILO IR	FILO IR	FILO IR	FILO IR		FILO	FILO IR	FILO IR	FILO
FLASH	88	89	90	91	92	93	94	95	96
1	VOLUME —								
2	VOLUME +								
3	SEEK —								
4	SEEK +								
5	SOURCE/PWR	SOURCE/PWR	SOURCE	SOURCE	X	SOURCE	SOURCE	SOURCE	SOURCE
6	MUTE	MUTE	MUTE	MUTE	X	MUTE	MUTE	MUTE	MUTE
7	RDM	PHONE ANSWER/BACK	X	X	X	PHONE ANSWER	X	PLAY/PAUSE	X
8	TA	PHONE CLOSE/ROOT	X	X	X	VOICE	X	RPT	X
9	PHONE ANSWER	PHONE ANSWER/ BACK	PHONE ANSWER	X	X	PHONE ANSWER / PHONE CLOSE	PHONE ANSWER	PHONE ANSWER	X
10	PHONE CLOSE /BAND	PHONE CLOSE/ROOT	PHONE CLOSE	X	X	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	X

FUNC.	KENWOOD NRM
	FILO IR
FLASH	97
1	VOLUME —
2	VOLUME +
3	SEEK —
4	SEEK +
5	SOURCE PHONE CLOSE
6	MUTE
7	UP
8	VOICE
9	PHONE ANSWER
10	PHONE CLOSE

UNICOM PLUS TABELLA FUNZIONI / FUNCTION TAB

COLLEGAMENTI ECLIPSE FILARE (numero lampeggi 20):

AVN2227P: marrone tacche grigie (radio) va con il Viola (interfaccia)/ marrone tacche grigie - Nero (radio) va con il Marrone (interfaccia).

AVN4429 e AVN726EE: marrone tacche grigie (radio) va con il Marrone (interfaccia)/ marrone tacche grigie - Nero (radio) va con il Viola (interfaccia).

COLLEGAMENTI ECLIPSE4 FILARE (numero lampeggi 93):

AVN827GA: marrone tacche rosse (radio) va con il Marrone (interfaccia)/ bianco striscia blu tacche grigie (radio) va con il Viola (interfaccia)

ECLIPSE WIRE CONNECTION (number flashes 20):

AVN2227P: brown - gray (radio) with violet (interface)/ brown—gray - black (radio) with brown (interface).

AVN4429 e AVN726EE: brown - gray (radio) with brown (interface)/ brown - gray - black (radio) with violet (interface).

ECLIPSE4 WIRE CONNECTION (number flashes 93):

AVN827GA: brown - red (radio) with brown (interface)/ white - blue - gray (radio) with violet (interface).

ATTENZIONE

IL PROFILO RADIO 7 (VDO RESISTIVA) SI PUO' AVERE PERDENDO IL PROFILO 20 (ECLIPSE RESISTIVA), MENTRE IL PROFILO 56 (GRUNDIG RESISTIVA) SI PUO' AVERE PERDENDO IL PROFILO 5 SONY.

⁽¹⁾LA RADIO PHONOCAR VM029 HA SOLO LE SEGUENTI FUNZIONI: VOLUME-, VOLUME+, SEEK-, SEEK+, MODE E MUTE.

PER IL PROFILO RADIO 93 (ECLIPSE AVN827GA) LE FUNZIONI 7 E 10 SERVONO PER L'APPRENDIMENTO DEI TASTI TELEFONO

CAUTION

YOU CAN HAVE RADIO PROFILE 7 (VDO RESISTIVE) BUT YOU LOST RADIO PROFILE 20 (ECLIPSE RESISTIVE), INSTEAD YOU CAN HAVE RADIO PROFILE 56 (GRUNDIG RESISTIVE) BUT YOU LOST RADIO PROFILE 5 (SONY).

⁽¹⁾PHONOCAR RADIO VM029 HAS ONLY THE FOLLOWING FUNCTIONS: VOLUME-, VOLUME+, SEEK-, SEEK+, MODE AND MUTE.

PROFILE FOR RADIO 93 (ECLIPSE AVN827GA) FUNCTIONS 7 AND 10 ARE LEARNING KEY TELEPHONE

MODELLO RADIO / RADIO MODEL	ADATTATORE RADIO/ RADIO ADAPTER
CLARION, JVC, BELSON NAVIX-450, BS3112; MACROM M-DVD5542R, M-DVD5561R, M-DVD5562R; DIGITAL DYNAMIC DYMAGE-N620; SKYWAY GM-7540 NAVI; AUTOSONIK DAYTONA 8000, INDIANAPOLIS 2600, INDIANAPOLIS 6100 Navi, MONTECARLO 2010; PHONOCAR VM033, VM037, VM029, VM057.	CBL007UNJV12
PIONEER, SONY, PHONOCAR VM040 (flashes 5), VM041 (flashes 5), **VM024; NAVIS NS-1770 (flashes 5); UNICARS EAGLE3.5, EAGLE2D, EAGLE2DBT, EAGLE2DGPS, EAGLE2DNAV, EAGLE2D62NB (flashes 4); EVUS DD710X (flashes 4); INNOVATE INVIM3231 (flashes 4); CASKA CA1621G (flashes 4); DIGITAL DYNAMIC DYMAGE NF630 (flashes 4), DYMAGE M700 (flashes 4); *GRUNDIG DELPHI X350BT, DELPHI X440BT; AUTOSONIK JEREZ-1160 (RESISTIVE), **SUZUKA 3400, **LE MANS 1200, **BAHRAIN 1100; *KENVOX AFRICA TWIN 1400, RAPTOR 1200, LOW RIDER 1100; BLAUPUNKT NEW YORK 800 (RESISTIVE); PHONOCAR VM025, VM026.	CBL007UNPI12
ALPINE.	CBL007UNAL22
KENWOOD.	CBL007UNKE11
PANASONIC, PHONOCAR FORYOU, CMU128, CM123, VM020, VM021, DM736, VM016, VM017, VM030, VM031, VM032, VM036, VM050, N6205, VM066; VM081; VM027 ; AUTOSONIK DAYTONA 7000; ZENEC ZE-MC194, ZE-MC192, ZE-NC2040, XZENT XT8020, ZE-NC520, ZE-NC524; DIGITAL DYNAMIC DX650D, DX700; HARDSTONE HS DPM61, HS DPM62, HS DPM63, HS DPM31, HS DPM7G, HS DPM8G, HS DPM71, HS DPM64, HS DPM69; MACROM M-DVD6555R, M-DVD6556R; KENVOX NINJA 7200, NINJA 7200 N; RADIO JEEP; RADIO AUDI A4; RADIO CAPTUR.	CBL007UNPN21
BLAUPUNKT; BLAUPUNKT 2 ATLANTA 110, MADRID 210, TORONTO410BT, SAN FRANCISCO 310.	CBL007UNBL12
*VDO.	CBL007UNVD11
ECLIPSE AVN2227P, AVN4429, AVN726EE.	CBL007UNEL11
BLACHSTONEBS-ARM11 Radio ad apprendimento resistivo, si deve impostare sulla radio 10kΩ, il cambio sorgente è sul filo blu della radio (MODE-KEY) da collegare con il nostro marrone, il filo rosa della radio (AD-KEY) va collegato con il nostro viola ed il filo nero della radio con il nostro nero. / Radio resistive to learning, to be set on 10k radio, the transmission source is on the blue wire to the radio (MODE-KEY) to be connected with our brown, the pink wire to the radio (AD-KEY) should be connected with our purple and the black wire to the radio with our black.	
*DISPONIBILE SOLO CON HARDWARE DEDICATO / AVAILABLE ONLY WITH DEDICATED HARDWARE	
**TAGLIARE FILO IN POSIZIONE 2 DEL MICROFIT / TO CUT WIRE IN POSITION 2 OF MICROFIT.	

