

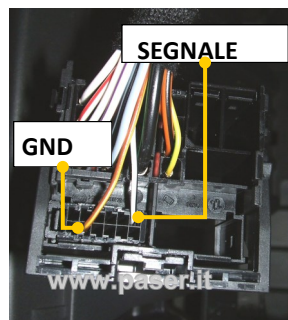
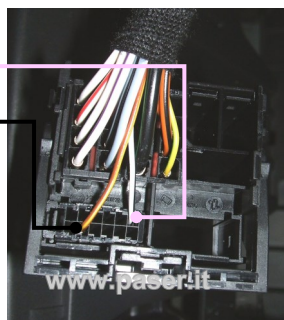
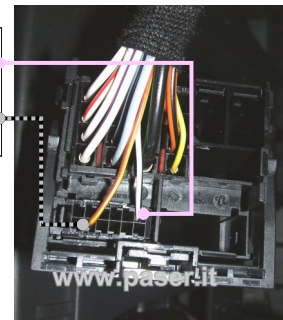
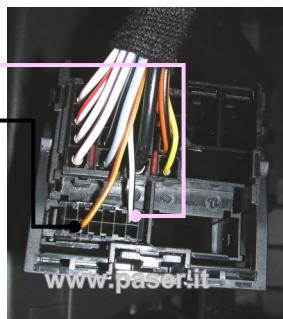
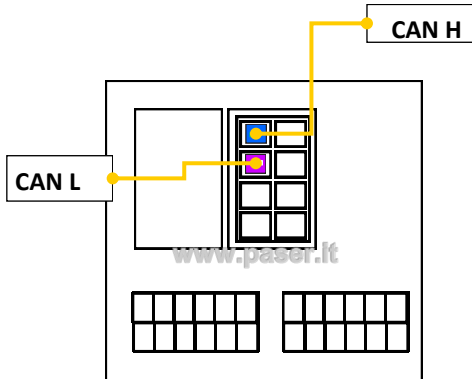
		<b>FORD TRANSIT</b> 	<b>2007&gt;</b> PROTOCOLLO RESISTIVO  <b>2007&gt;</b> RESISTIVE PROTOCOL
---	---	---	--



RESISTIVO - RESISTIVE



POSIZIONE CONNETTORE: VANO AUTORADIO - CONNECTOR LOCATION: IN RADIO SLOT

CONNESSIONI DI  
UNICOM  
UNICOM  
CONNECTIONSCONNESSIONI DI  
UNICO DUAL  
UNICO DUAL  
CONNECTIONSCONNESSIONI DI  
LOGICAN  
LOGICAN  
CONNECTIONSCANBUS PER RECUPERO SERVIZI  
CANBUS FOR SERVICES RECOVERY

COMANDI AL VOLANTE - STEERING WHEEL COMMANDS



FUNZIONI - FUNCTIONS

1	VOL+
2	VOL —
3	SEEK +
4	SEEK —
5	SOURCE / MUTE

PRODOTTI SUGGERITI - SUGGESTED PRODUCTS

LOGICAN - UNICOM - UNICO DUAL - SLIMCAN - SLIMKEY - UNIKA - MAESTRO

Le informazioni riportate in questo manuale sono puramente a scopo informativo pertanto possono subire modifiche senza preavviso. Al momento della pubblicazione le informazioni risultano corrette ed attendibili. Tuttavia Paser non può essere ritenuta responsabile per eventuali conseguenze derivanti da errori od omissioni del presente manuale. Paser si riserva il diritto di migliorare/modificare il prodotto o il manuale senza l'obbligo di notifica agli utenti. Information in this guide are purely for information purposes, therefore, are subject to change without notice. At the time of publication the information is correct and reliable. However Paser can not be held responsible for any consequences resulting from errors or omissions in this manual. Paser reserves the right to improve / change the product or manual without obligation to notify users.