

PARROT BLUETOOTH

PASER CONVERSO DISPLAY VW

MANUAL OF INSTALLATION AND USE rev. 1.0 12

The interface in object is designed to equip VW and Skoda with Parrot Bluetooth hands-free system. The kit consists of: the adapter PASER CONVERSO DISPLAY for steering wheel commands and display (MFA PLUS), that allows the integration of the system without adding the control pad of the kit and without external display to visualize the functions.

The system also provides the connection to the iPod, with USB and AUX input for external audio source.

INSTALLATION

The installation of the system is simple because the kit is equipped with PLUG & PLAY connection. The steps are:

- Remove the OEM radio.
- Connect the plug & play cables.
- Connect the unit Parrot MKi9000 (at least with software version 1.90).
- Lay down the microphone
- Lay down the wiring
- repositioning of the OEM radio into its housing.


ATTENTION!
THE CAR KIT SOFTWARE
VERSION MUST BE AB-
SOLUTELY FROM THE
1.90 ONWARDS.
THE DISPLAY VW & SKODA
COMPATIBLE IS MFA PLUS.

Wiring Diagram


1. MKI9000 CAR KIT
2. CONNECTOR FAKRA: CONNECT TO RADIO
3. CONNECTOR FAKRA: CONNECT TO THE VEHICLE STEERING WHEEL COMMANDS AND DISPLAY MODULE
4. MICROPHONE
5. CONNECT TO THE HANDSFREE KIT
6. CONNECTION OF: IPOD or USB or AUX IN
- 7.

DIP SWITCHES SETTING


Red VW Display
And 2 phone buttons






Red VW Display
And 1 phone button



White VW Display
and 1 phone button



White Display Skoda

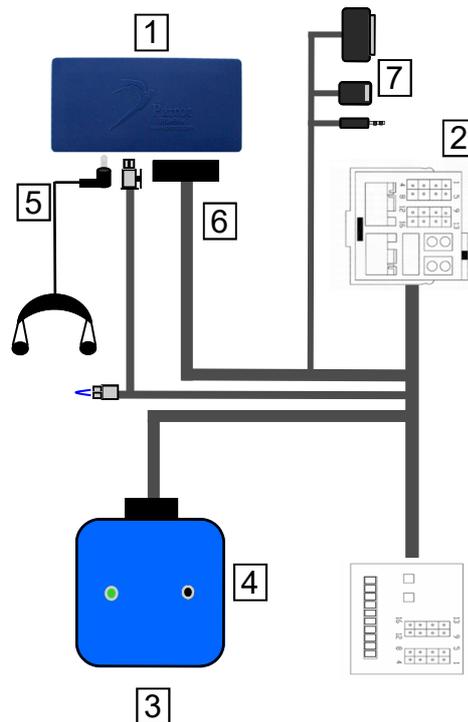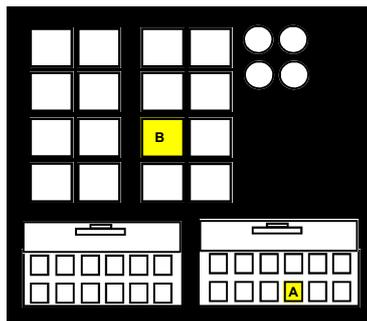

Depending on the model and year of manufacturing of the OEM radio, the mute input can be in two different locations; the new radios have the mute in position A as shown in the diagram alongside; the old generation of radios, in position B. In any case, we suggest you always to control the radio diagram.



ATTENTION! IT MUST TO ACTIVATE THE BLUETOOTH FUNCTION ON THE BODY COMPUTER AS DONE FOR THE OEM VW BLUETOOTH CAR KIT

ATTENTION!
THE CARKIT SOFTWARE VERSION MUST BE ABSOLUTAEELY FROM THE 1.90 ONWARDS.
OLDER VERSIONS ARE NOT WORKING AND CAN FROZE THE SOFTWARE OF CONVERSO!
IN CASE OF OLDER SOFTWARE VERSIONS OF THE CAR KIT PLEASE UPGRADE THE CAR KIT SOFTWARE WITHOUT CONVERSO CONNECTED!

WARRANTY CONDITIONS

THIS PRODUCT HAS A TWO-YEAR GUARANTEE FOR ANY KIND OF PRODUCTION DEFECT.
THE FISCAL SALES DOCUMENT IS NECESSARY FOR THE VALIDITY OF THE GUARANTEE.


The information in this guide are purely for information purposes, therefore, are subject to change without notice. At the time of publication the information is correct and reliable. However Paser can not be held responsible for any consequences resulting from errors or omissions in this manual. Paser reserves the right to improve / change the product or manual without obligation to notify users.

HOW TO CONTROL PARROT KIT WITH VOLKSWAGEN / SKODA VEHICLES HAVING ONE PHONE BUTTON

	Phone Button 	Volume Buttons 	SEEK Buttons 
	Phone Button 	Volume Buttons 	SEEK Buttons 
Answer a call	TEL (short)		
Refuse a call	TEL (long)		
Vocal call	TEL (short)		
Redial Last number	TEL (long)		
Volume call Increase Volume MP3 Increase		V+	
Volume call Decrease Volume MP3 Decrease		V-	
Discrete mode	TEL (short)		
Back from discrete mode	TEL (short)		
Close Call	TEL (long)		
Select MENU			SEQUENCE S+S+S-
Scroll MENU Onward			S+ (short)
Scroll MENU Backward			S- (short)
Confirm MENU choice	TEL (short)		
Next Track MP3			S+ (short)
Previous Track MP3			S- (short)
Play - Pause MP3			SEQUENCE S- S+
MENU Back	TEL (long)		
Mute Microphone			SEQUENCE S- S+
Change mobile phone		SEQUENCE V- V+ 3 times	

HOW TO RESET PHONES PAIRED

IF YOU NEED TO RESET THE MEMORY OF HANDSFREE KIT TO ERASE THE MOBILEPHONES, YOU MUST ONLY TO PRESS THE SEQUENCE OF VOLUMES: VOLUME - FOLLOWED BY VOLUME + (FIVE TIMES VOL- / VOL + / VOL- / VOL+)

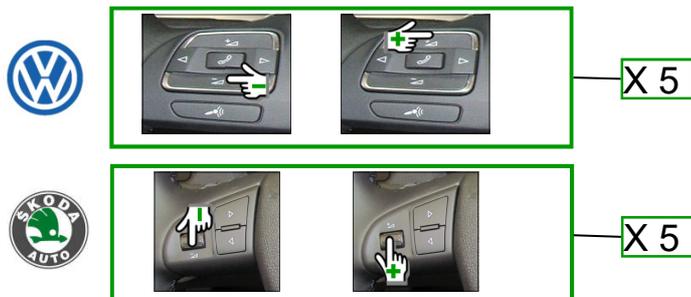

MANAGEMENT OF HANDSFREE SKODA PROFILE WITHOUT PHONE BUTTON

	ENTER button 	Volume buttons 	SEEK buttons 
Answer a call	PRESS ENTER (short)		
Refuse a call	PRES ENTER (long)		
Vocal call	PRESS ENTER (short) Only in phone page		
Redial Last number	PRESS ENTER (long) Only in phone page		
Volume call Increase Volume MP3 Increase		V+	
Volume call Decrease Volume MP3 Decrease		V-	
Discrete mode	PRESS ENTER (short)		
Back from discrete mode	PRESS ENTER (short)		
Close Call	PRESS ENTER (long)		
Select MENU			SEQUENCE S+S-S-
Scroll MENU Onward			S+ (short) Only in phone page
Scroll MENU Backward			S- (short) Only in phone page
Confirm MENU choice	PRESS ENTER (short) Only in phone page		
Next Track MP3			S+ (short)
Previous Track MP3			S- (short)
Play - Pause MP3			SEQUENCE S- S+
MENU Back	PRESS ENTER (long) Only in phone page		
Mute Microphone			SEQUENCE S- S+
Change mobile phone		SEQUENCE V- V+ 3 times	

HOW TO CLEAR PHONES MEMORY

IF YOU NEED TO ERASE THE MEMORY OF HANDSFREE KIT TO RESET ASSOCIATED PHONES, YOU MUST ONLY TO PRESS THE SEQUENCE OF VOLUMES: VOLUME - FOLLOWED BY VOLUME + (FIVE TIMES VOL- / VOL + / VOL- / VOL+)



X 5


BLUETOOTH PROFILE ACTIVATION

The system in object is designed to provide the VW and Skoda vehicles with Bluetooth handsfree. For proper functionality, you must enable the phone function on the head unit of the vehicle using the VAS. Please follow the steps described below:


Connect the VAS diagnosis computer to the OBD plug of the vehicle.




Select the voice **Self-diagnosis**.

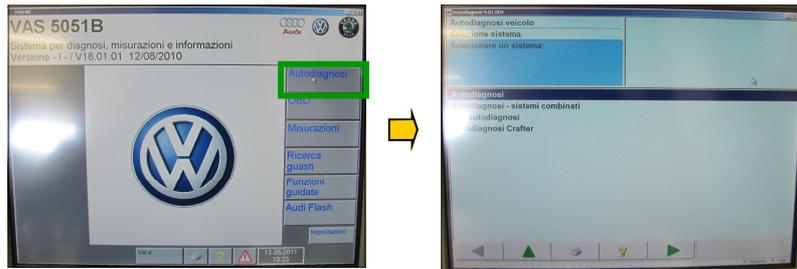

Select the address 19 and so, at the next window, the profile 008.

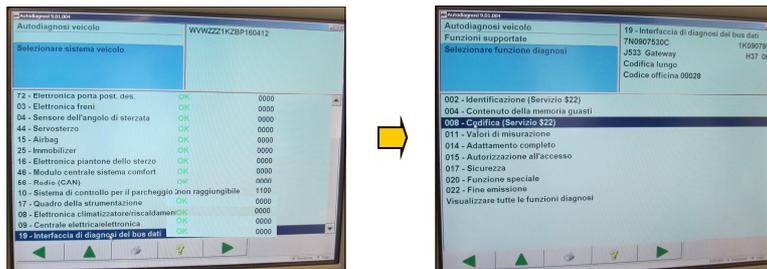

In the profile 008, please select Setting List encoding and so the address 77, PHONE.

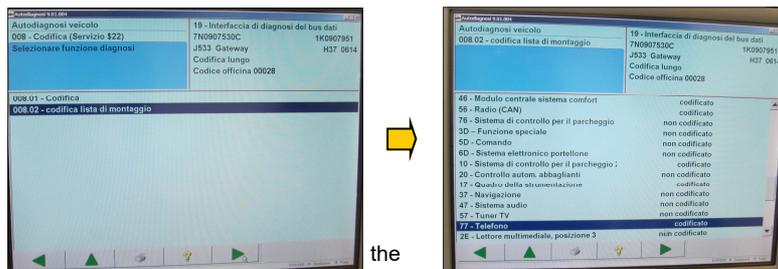

Please confirm the code; encoding is done.

the

system will confirm that

The activation is done.

