
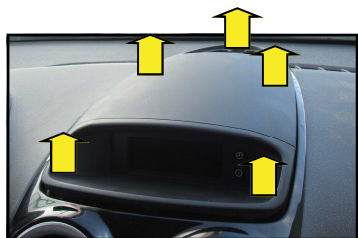
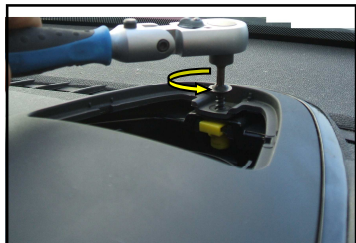



GMLAN CONNECTIONS (SEEN FROM CABLE OUPUT OF CONNECTORS) rev. 1.15

OPEL CORSA D GMLAN CONNECTION



To connect the canbus wire to the car it is necessary to do it directly to the display.
First of all remove the plastic panel shown below. Once the panel is removed, please remove the torques that keeps the display chassis blocked.

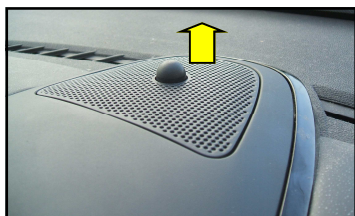

Once the torques is removed, detach the display with its plastic .
Now rotate the display so to have the acces to the connector of the display.

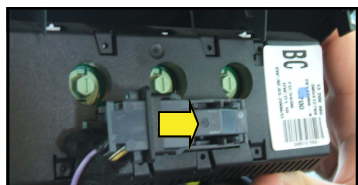

Once disconnected the plug from the display remove the connector inside as shown in the picture.

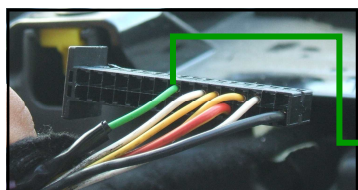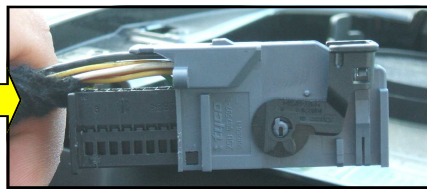

Now detect the GREEN wire and connect the GREEN wire of the module.

GMLAN

CONNESSIONI GMLAN (I CONNETTORI SONO VISTI DALL'USCITA DEI CAVI) rev. 1.15




BUICK
LACROSSE

CHEVROLETE
EXPRESS

PORTA OBD

GMLAN




CADILLAC
ESCALADE - BLS

SAAB
9.3 - 9.5

CHEVROLET
TAHOE

IL CONNETTORE SI TROVA DIETRO
LA RADIO ORIGINALE


GMLAN



OPEL
INSIGNIA - MOKKA

GMLAN

IL CONNETTORE SI TROVA DIETRO
LA RADIO ORIGINALE

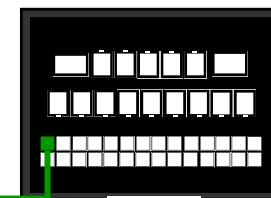


OPEL
ASTRA - MERIVA

CHEVROLET
CRUZE

GMLAN




IL CONNETTORE SI TROVA DIETRO
LA RADIO ORIGINALE

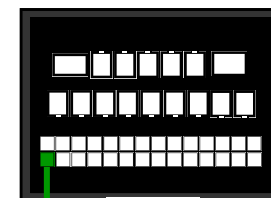


CONNESSIONI GMLAN (I CONNETTORI SONO VISTI DALL'USCITA DEI CAVI) rev. 1.15

CONNESSIONI GMLAN OPEL CORSA D



Per collegare il cavo canbus è necessario intervenire sul display. Pertanto smontare la griglia di plastica che è ad incastro.
Una volta rimossa la griglia è necessario estrarre la vite torques che tiene assicurato il corpo in plastica del display.

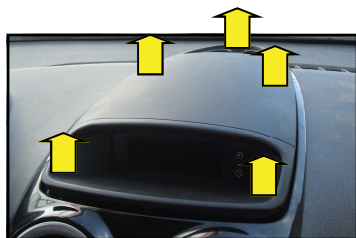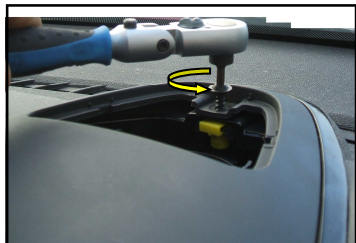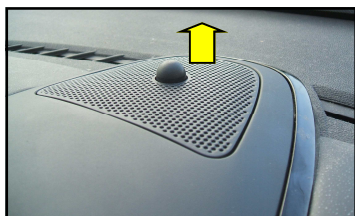

Una volta liberato dalla propria sede ruotare il display in modo da avere accesso al connettore Grigio. Rimuovere il connettore grigio sganciando la levetta di fermo.

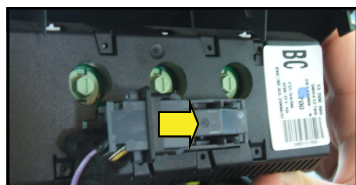

Scollegato il connettore dal display fare una leggera pressione con un cacciavite in modo da liberare il porta terminali del connettore.

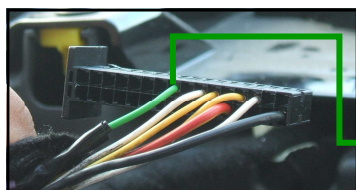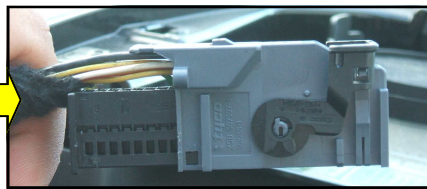

Ora individuare il filo Verde che è il cavo canbus e collegare il cavo verde del modulo.

GMLAN

GMLAN CONNECTIONS (SEEN FROM CABLE OUPUT OF CONNECTORS) rev. 1.15




BUICK
LACROSSE

CHEVROLETE
EXPRESS

GMLAN

OBD PORT




CADILLAC
ESCALADE - BLS

SAAB
9.3 - 9.5

CHEVROLET
TAHOE

CONNECTOR IS LOCATED BEHIND
OEM RADIO


GMLAN



OPEL
INSIGNIA - MOKKA

GMLAN

CONNECTOR IS LOCATED BEHIND
OEM RADIO

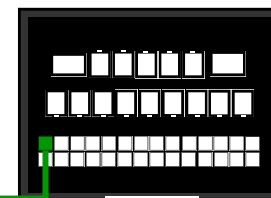

OPEL
ASTRA - MERIVA

CHEVROLET
CRUZE

GMLAN

CONNECTOR IS LOCATED BEHIND
OEM RADIO

